



Mains Powered Heat Alarm

User's Manual



1.Important Safeguards and Warnings

This manual will help you to use the device properly. Read the manual carefully before using the device, and retain it well for future reference.

Operation Requirements



WARNING

- Never ignore any alarm. Failure to respond may lead to serious injury or death.
- If the cause of the alarm is not obvious, assume that the alarm is due to an actual fire and evacuate the dwelling immediately.



CAUTION

- Make sure that the power supply of the device works properly before use.
- Use the device according to the operating environment.
- Only use the device within the rated power range.
- Transport, use and store the device under allowed humidity and temperature conditions.
- Prevent liquids from splashing or dripping on the device. Make sure that there are no objects filled with liquid on top of the device to avoid liquids flowing into it.
- The heat alarm is only designed to detect temperature increase, but it cannot detect gas, smoke or flames.

Installation Requirements



WARNING

- The Alarm **MUST NOT** be powered from a light dimmer circuit.
- The Alarm **MUST NOT** be connected when the house wiring insulation is being checked with high voltages. i.e. Do not use a high voltage insulation tester on the Alarm.
- Failure to properly install and operate this device will prevent proper operation of the device and will prevent its response to fire hazards.
- Before installation and removal, disconnect the Mains power supply.
- The device must be installed by a qualified electrician. There are no repairable parts inside.
- Strictly comply with the local electrical safety code and standards, and check whether the power supply is correct before operating the device.
- Do not connect the device to two or more kinds of power supplies, unless otherwise specified, to avoid damage to the device.
- The device must be installed in a location that only professionals can access, to avoid the risk of non-professionals becoming injured from accessing the area while the device is working. Professionals must have full knowledge of the safeguards and warnings of using the device.
- To prevent injury, this apparatus must be securely attached to the ceiling/wall in accordance with the installation instructions.

 CAUTION

- Observe all safety procedures and wear required protective equipment provided for your use while working at heights.
- Do not expose the device to direct sunlight or heat sources.
- Keep the original packing material well because you might need it to pack the device and send it back for repair.
- Make sure the application scenario conforms to installation requirements. Contact your local retailer or customer service centre if there is any problem.
- All installation and operations shall conform to your local electrical safety requirements, fire protection regulations, and other relevant regulations.
- The alarm doesn't need to be earthed. The device is a class II electrical appliance.
- This product must be installed by a licensed electrician in accordance with BS 7671. If there are other relevant standards in this region, please comply with local relevant regulatory requirements.

Maintenance Requirements

- Do not clean the device with any cleaning products.
- Do not paint the device. Paint will seal the vents and interfere with the sensor's ability to detect temperature.

2.Introduction

2.1 Product information

Mains Powered Heat Alarm (hereinafter referred to as the device) is specifically designed to continuously monitor temperature. Using a high-precision thermistor and an intelligent algorithm, it triggers an alarm when a predetermined temperature is reached. It is ideal for smoky, dusty, or humid areas that may trigger false smoke alarms, e.g., kitchens where cooking fumes are present and attics, garages boiler rooms where there may be lots of dust. Heat Alarms can monitor these areas for a fire, with less risk of a false alarm. Up to 24 alarms can be interconnected. Once one device triggers an alarm, the alarm signal will be pushed to every alarm in the interconnected network and they will all trigger an alarm together.

The Heat Alarm is activated when there is a rapid and sustained increase in temperature, or when the ambient temperature exceeds 58°C, ensuring a fast response to fire-related incidents.

2.2 Product profile

Figure 2-1 Mains Heat Alarm with Rechargeable Lithium Battery Backup


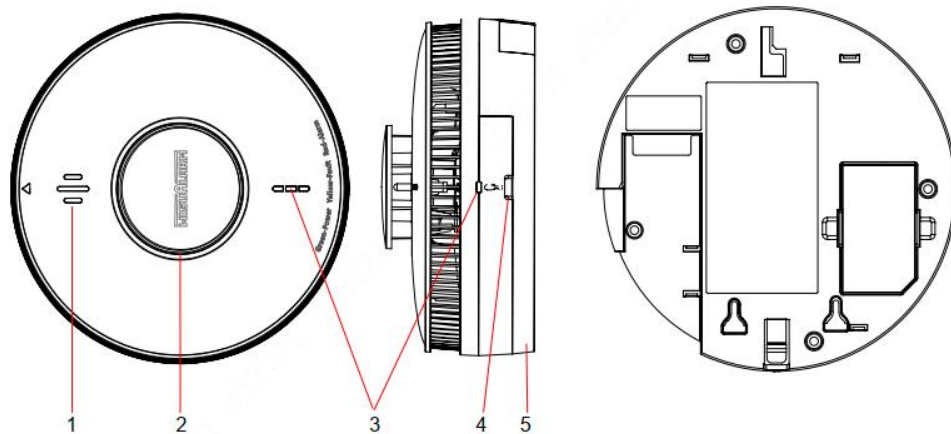


Figure 2-2 Mains Heat Alarm with Replaceable 9V Battery Backup

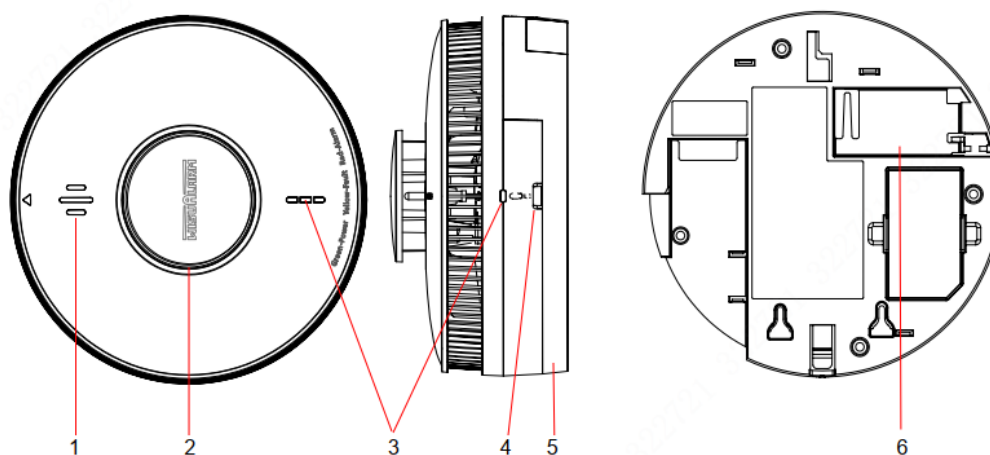

No.	Name	Introduction
1	Buzzer	Alarm Sound: 85 dB (A) at 3 m (9.84 ft)
2	Test/Silence Button	The large central push button enables you to test and silence the alarm. By pressing the central button, you can: ● Verify normal operating ● Temporarily stop the alarm sound
3	Indicator	● Green: Power ● Yellow: Fault ● Red: Alarm and pair ● Blue: Pair
4	Removal Latch	Remove the device from the mounting plate
5	Mounting Plate	Install the device
6	Battery Compartment (Optional)	User-replaceable 9 V Alkaline battery For Mains Smoke Alarm with replaceable battery back-up only

3. Technical Information

Specification	Introduction
Collection Type	Temperature
Sampling Period	10 s
Sensor Type	Thermistor
Alarm Type	Heat alarm, fault warning, low battery warning
Alarm at Temperature Range	● Rapid increase in temperature level ● Absolute heat level of 58°C (136.4°F)
Alarm Volume	85 dB (A) at 3 m (9.84 ft)
Alarm Mode	Visual and audible alarm
Silencing Function	Yes
Silence Duration	9 min
Indicator Light	Alarm, fault and operation indicator
Maximum number of connected units	24 hardwire interconnected
Power Source	AC 100V - 250V, 50/60Hz, 0.8W
Battery Back-up	● 10-year rechargeable lithium battery ● Replaceable 9 V Alkaline battery
Detection Class	Class A1 fire detection
Operating Temperature	-10°C to +55°C (+14°F to +131°F)
Operating Humidity	≤95% RH (non condensing)
Colour	White
Casing	PC+ABS
Dimensions	Φ148.6mm × H68.4mm (Φ5.85" × H2.69")
Weight	310 g (0.68 lb)
Installation	Ceiling mount / wall mount

Specification	Introduction
Certifications	CE, UKCA and CSIRO ActivFire listed
Compliance Standard	BS 5446-2:2003 and AS 1603.3:2018

4. Device Installation and Removal

4.1 Package content

Check the contents of the package against the list below. If the Device is damaged or a part is missing, please contact the supplier.

Table 4-1 Checklist

Name	Number
Heat Alarm	1
Mounting Plate	1
Dust Cover	1
Screw Package	1
User Manual	1

4.2 Installation principle

The advice here follows the guidance in British Standard BS 5839-6 or the building code of Australian, state and territory building regulation and AS 1670.1 in general (for further information, refer to the relevant standards).



- Mains-operated alarms must be installed and interconnected by a licensed electrician in accordance with BS 7671. If there are other relevant standards in this region, please comply with local relevant regulatory requirements. Failure to install this alarm correctly may expose the user to shock or fire hazards and damage the product.
- The alarm must be continuously powered throughout the day. Do not connect the device to a circuit that can be turned off by a switch.
- Avoid installation in new or renovated buildings until all work is completed.

4.3 Installation position

In which room should the Device be installed?


The heat alarm is suitable for use in standard residential dwellings. This heat alarm is not intended for any non-residential, commercial or industrial applications, nor for any other purpose than described.

The heat alarm is suitable for kitchens, garages, lofts, attics, boiler rooms and laundry rooms. For the best protection, heat alarms should always be installed as part of a complete fire protection system that includes smoke alarms. The heat alarm should never be used as an alternative to or replacement for smoke alarms to provide early warning of smoke, fire or heat.

⚠ CAUTION

This device is intended for use in ordinary indoor locations of residential accommodation. Construction and layout of individual dwellings will vary, so this should be regarded as a reference only. For further guidance, please check with your local fire station.

Figure 4-1 Overall layout

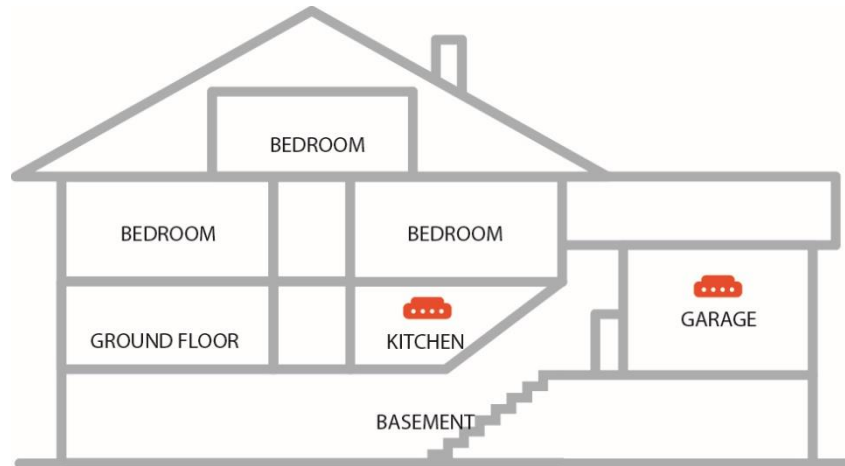

Where in the room should the Device be installed?

- Heat alarms should be sited on the ceiling, ideally in the centre of the room.
- Site alarms at least 300 mm (12") from walls, light fittings, or other obstructions. Install your Heat Alarm at a distance no greater than 5.3 m (17.4 ft) from the farthest wall, no greater than 5.3 m (17.4 ft) from a door to any room in which a fire might start, and no greater than 5.3 m (17.4 ft) from the next Heat Alarm.
- Alarms should not be sited within or too close to a bathroom door as steam and moisture can affect them.
- Avoid the area close to fluorescent lights as the flickering light may trigger the alarm or affect its operation.
- Ensure that the alarm is outside of any dead air spaces that occur in corners and spaces where the airflow may be blocked.
- When a heat alarm is installed in peaked and sloped ceilings, a maximum of 150 mm (6") vertically down from the apex on the slope is required.
- The alarm should have its vents easily accessible for testing and maintenance.

Figure 4-2 Recommended location (1)

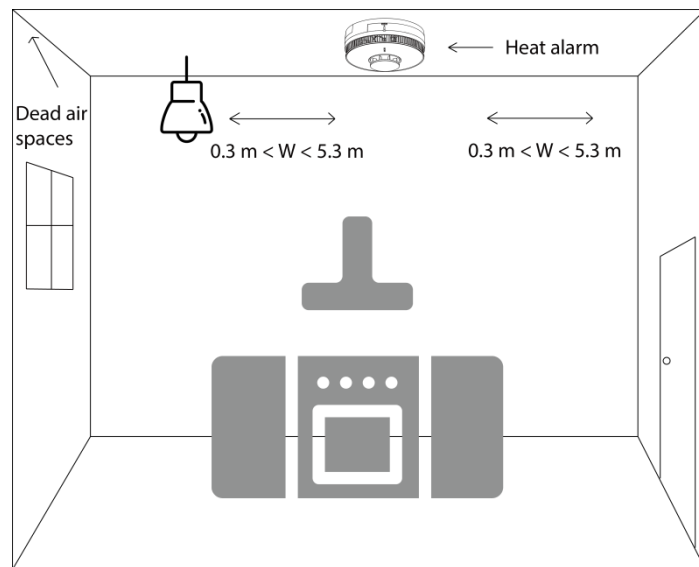


Figure 4-3 Recommended location (2)


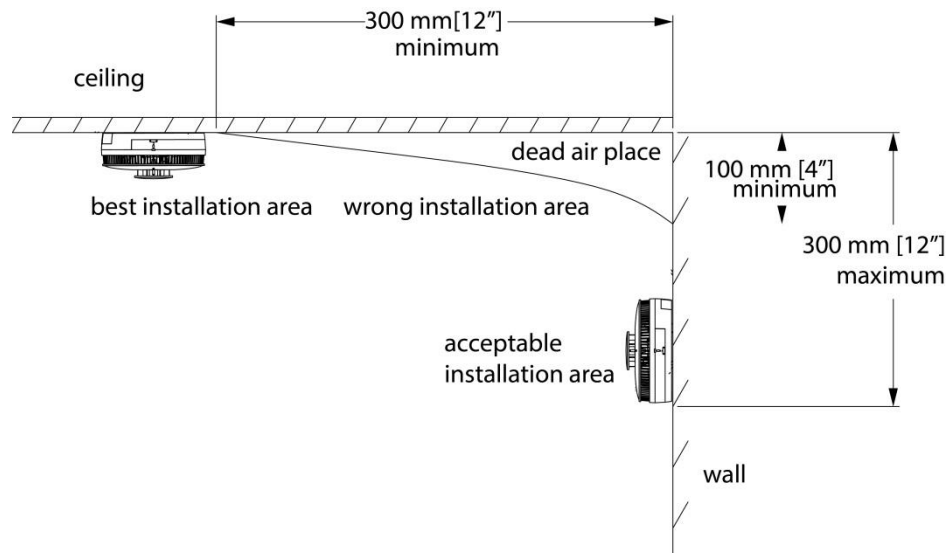


Figure 4-4 Recommended location (3)

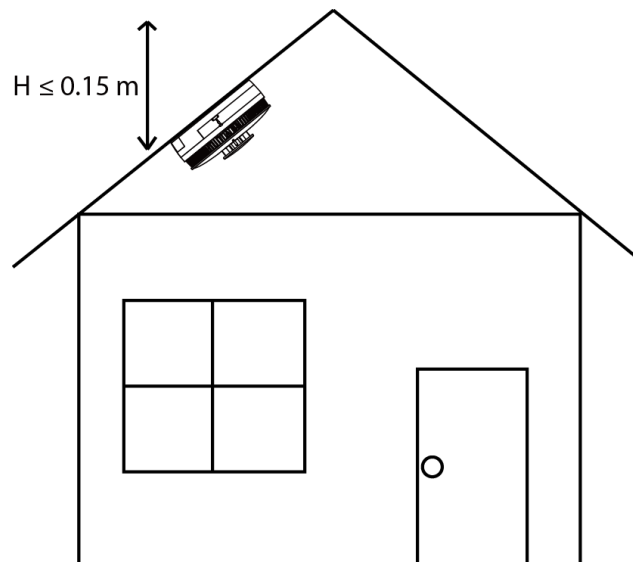


4.4 Installation steps

Follow below steps to install the device properly.

Step 1 Disconnect the AC mains supply from the circuit that will be used.

Step 2 Choose a suitable place to install mounting plate complying with the advice in previous sections.

Figure 4-5 installation (1)

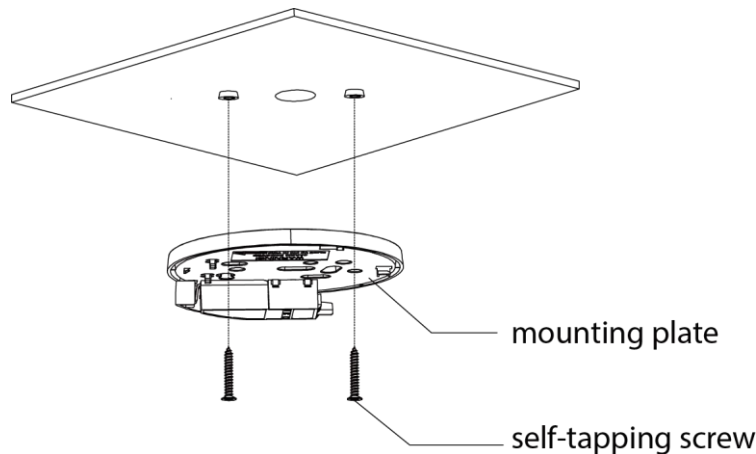

Step 3 Insert screwdriver to lift off wiring cover.



The wiring must be connected to the terminal block on the mounting plate as follows:

- **L:** Live - connect to the house wires coloured brown or marked L.
- **N:** Neutral - connect to the house wires coloured blue or marked N.
- **IC:** Interconnect – connect all circuit terminals for alarm interconnection (see Section 5 Interconnection).




- Wiring must be installed by a licensed electrician in accordance with BS 7671. If there are other relevant standards in this region, please comply with local relevant regulatory requirements.
- Checking for Live and Neutral using a two probe tester is recommended.
- Checking for Live using a neon tester is recommended.
- Make sure that the Interconnect wire is **NOT** connected to Live, or Neutral. Do not use an Earth wire to connect the interconnect terminal (IC terminal) for the interconnection.



Mixing (or poorly terminating) the Live and Neutral connections during interconnection may damage all alarms. Please use wires of the same colour throughout the premises for Live, Neutral and Interconnect wires.

Figure 4-6 installation (2)

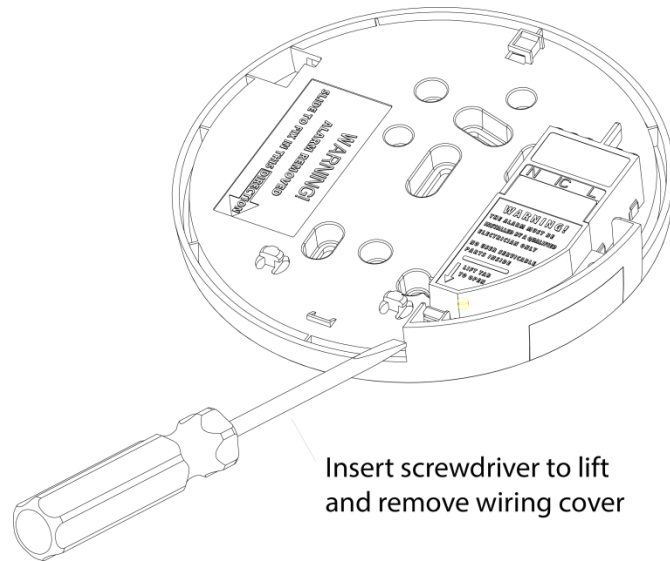

Step 4 Connect the power cables to the terminal block and tighten the screws.

- 1) If the mains wires are recessed, bring the wires through the rear hole in the mounting plate.
 - ◇ If a three-core wire is adopted, connect one wire core to L, IC, and N respectively.
 - ◇ If a four-core wire is adopted, connect one insulated wire core to L, IC, and N respectively, and connect the other uninsulated wire core to the device's PE terminal.

Figure 4-7 installation with three-core wire (3)


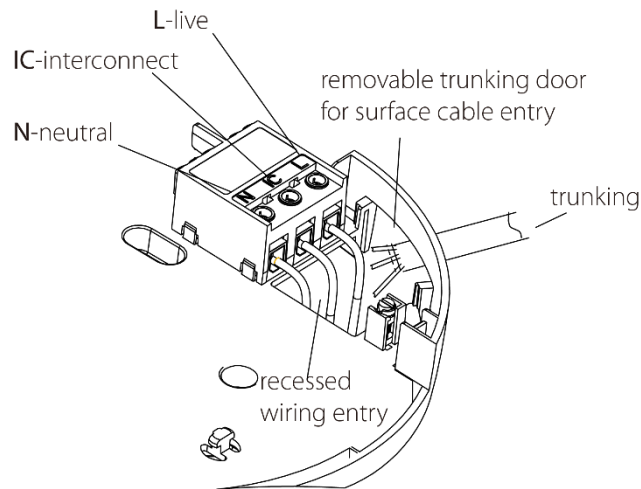


Figure 4-8 installation with four-core wire (4)



- 2) If the mains wires are mounted on the surface, take the removable section out for wiring. A standard cable duct or trunking can be directly interfaced with the mounting plate without the removable trunking door.

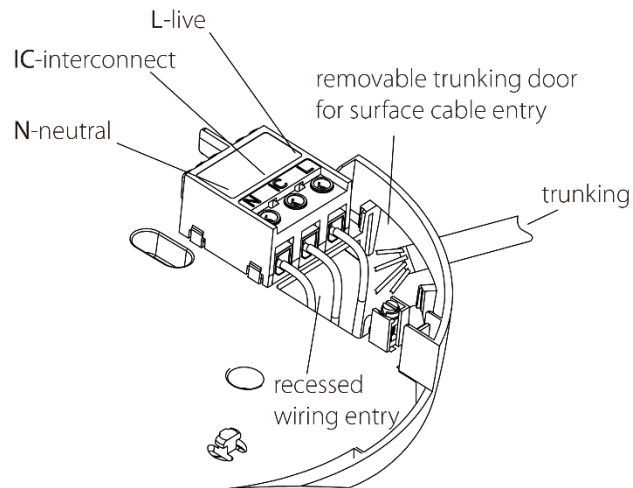

If you are not using surface wiring, the removable section must be left in place for electrical safety reasons.

Figure 4-9 installation with three-core wire (5)


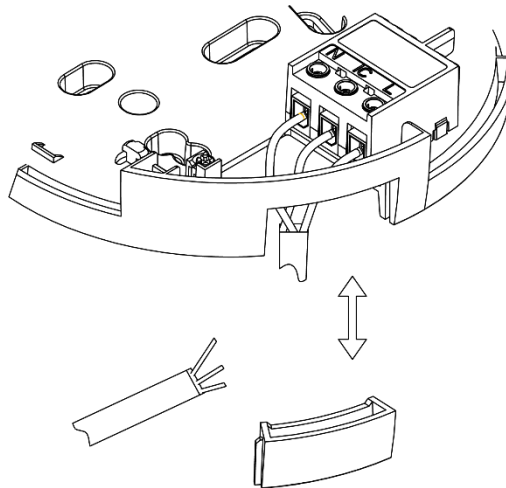



Figure 4-10 installation with four-core wire (6)

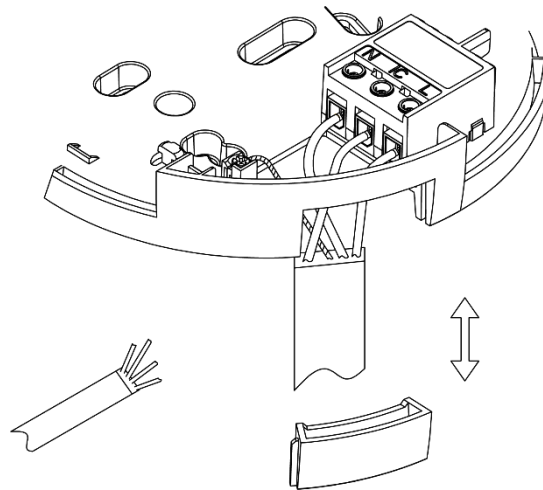

Step 5 Remove the dust cover.

Step 6 Install the mounting plate with screws, write the installation date, and ensure that the alarm is properly aligned with the mounting plate before sliding it on according to the corresponding direction as shown in the mounting plate.

Figure 4-11 installation (7)

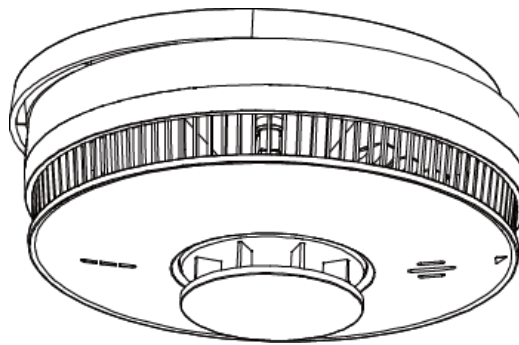

Step 7 Connect the mains power to the alarm circuit. Verify that the green LED light on the front of the alarm illuminates.

Step 8 Press and hold the **Test/Silence** button for 10 seconds, the alarm will beep. Check that other interconnected alarms also beep within this period. Release the **Test/Silence** button, the buzzer stops beeping immediately.


4.5 Removal steps

Locate the arrow on the front face of alarm. The slot is located directly above the arrow.

Step 1 Disconnect the mains power.

Step 2 Insert a flat-bladed screwdriver horizontally about 10 mm (0.39") into the centre of the removal slot.

Figure 4-12 Removal

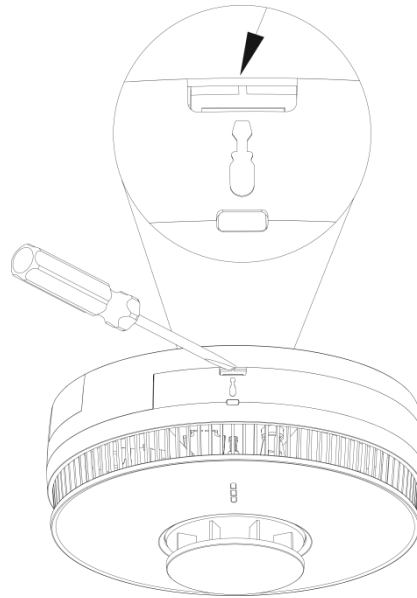

Step 3 With the screwdriver inserted, push the lower half of the alarm away from the screwdriver.

Step 4 Hold the lower half of the alarm head and remove it from the mounting plate by lowering it towards the ground.

The alarm will detach from the mounting plate. Make sure that you hold the alarm head consistently in case of dropping to the ground.

5.Interconnection

- Heat alarms should always be interconnected with smoke or multi-sensor alarms to provide adequate early warning.
- Once one device triggers an alarm, all interconnected devices will trigger the alarm together.
- This device can be interconnected with Wisualarm interconnected alarms to construct a hybrid system. A maximum of 24 interconnected alarms can be interconnected.

Prerequisite

- Make sure all wiring is firmly connected to ensure successful interconnection. Otherwise, the interconnection will fail or device malfunction may occur.
- All installation and operations shall conform to your local electrical safety requirements, fire protection regulations, and other relevant regulations.
- Avoid connecting the alarms to any other model manufactured by a different company. Such connections may cause damage to the alarms and pose risks of electric shock or fire hazards.


How to interconnect

To interconnect two or more alarms, connect all the IC terminals together.



- The interconnecting wire (minimum 0.75 mm² cable) must be treated as if it was Live. It should be insulated and sheathed.
- Wiring must be by a licensed electrician in accordance with BS 7671. If there are other relevant standards in this region, please comply with local relevant regulatory requirements.
- Do not exceed 250 m of connecting wire per circuit.

Figure 5-1 Interconnection

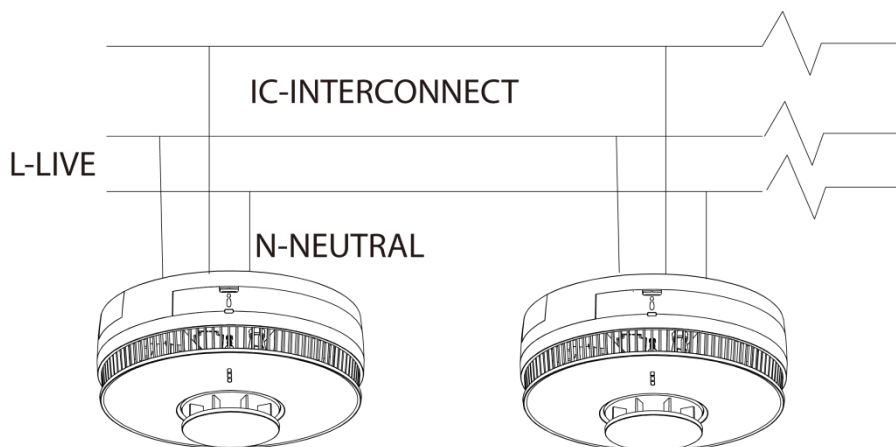

6. Test and Maintenance

After the installation of the device or regular maintenance, a test must be carried out to confirm that the Device is operating properly.

During the testing process, the defective device should be addressed according to "Frequently Asked Questions" and "Maintenance", and then tested again. If it fails to complete the test successfully, please send the device to the manufacturer for repair.

6.1 For a single heat alarm

Test

Press the **Test/Silence** button, the red LED indicator light will flash once with a short beep. Then the buzzer will beep twice continuously together with the red LED indicator flashing twice for two cycles.

Silence/Pause the alarm

When the temperature reaches a predetermined threshold, the LED indicator flashes, and the buzzer beeps (85dB). Press the **Test/Silence** button to temporarily mute alarm sound and the device will be in the silence mode for 9 minutes.



WARNING

NEVER IGNORE ANY ALARM.

If an alarm is sounding, it is warning you of a potentially hazardous situation. Do not ignore it. Ignoring the alarm may result in injury or death. If your heat alarm activates and you are not absolutely certain of the source of fire, get everyone out of the house immediately.

6.2 For interconnected heat alarms

Test

- Press and hold **Test/Silence** button on any interconnected heat alarm until other interconnected heat alarms in the network start to beep.
The initiating device will beep continuously with the red LED indicator flashing. After receiving a signal, other interconnected devices in the network start beeping three times continuously,
- Release **Test/Silence** button on initiating interconnected device, the initiating device stops flashing and beeping, and other interconnected devices stop testing soon.

Silence/Pause the alarm

Once the initiating device triggers an alarm, the device beeps with red LED indicator flashing once per second. After several seconds, other interconnected devices receive alarm signal with red LED indicator flashing and the buzzer beeping.

- Press **Test/Silence** button on initiating interconnected device.
All interconnected devices are temporarily silenced.
- Press **Test/Silence** button on any other interconnected device.
All the interconnected devices are temporarily silenced, except the initiating one.

6.3 Maintenance

To keep your device in good working condition, please follow these requirements.

- Simulate fire alarm test: Test the device once a week.
Under normal working conditions, press the **Test/Silence** button to ensure that the device can work normally. If there is a malfunction, please repair it in time. Clean the shell: Clean the device at least once per year (recommended).
Keep the device free of dust or inserts by gently vacuuming the shell with a soft brush attachment when required. Avoid cleaning solutions on the device to prevent the possibility of contaminating the sensor. After cleaning, please install the device and test again.
- Do not paint the device. Paint will seal the vents and interfere with the sensor's ability to work normally.
- When the battery voltage is lower than a certain threshold, LED indicator flashes and the buzzer beeps every minute until the battery is depleted. Please replace the device/battery immediately or contact technical support for advice.



When the detector stops working properly, please contact your local dealer or retailer for help.

7.Frequently Asked Questions

Problem	Solutions
Your heat alarm does not sound during testing	● Check that the alarm is activated. ● If testing immediately after first activating the alarm, you should allow a few seconds for the alarm to settle before testing. ● Make sure you push the Test/Silence button firmly.
Your alarm chirps intermittently	● Check the location of your heat alarm (see "Installation Position"). ● Clean the heat alarm (see "Test and Maintenance").
The LED indicator flashes yellow and the alarm sounds one beep every 60 seconds	● The device is under low battery condition, please replace the device/battery immediately. ● Please contact technical support for advice.

8.Indicator Summary Tables & Troubleshooting

8.1 Normal mode

State	Action	Green LED (Power)	Yellow LED (Fault)	Red LED (Alarm)	Buzzer
Power on	Slide onto mounting plate	-	-	 x1	 x1
Standby	-	 (AC mains power)/  x1 every minute (back-up battery)	-	-	-
Normal test	Press the Test/Silence button	-	-		
Interconnection test	Press and hold the Test/Silence button	-	-	 x1 every sec	 x1 every sec

 =LED on solid,  =LED flashing

8.2 Alarm mode

Action	Red LED (Alarm)	Buzzer
Alarm	 x1 every sec	 x1 every sec
Alarm triggered by another device in interconnected network	 x3 Every 2 sec	

8.3 Interconnection mode

State	Action	Red LED (Alarm)	Blue LED (Pair)	Buzzer
Interconnection	Press the Test/Silence button 4 times		-	 ×1
	Press the Test/Silence button twice		-	 ×1
	Interconnection succeeded	-	 ×1 every sec	 ×1
Pairing with gateway	Press the Test/Silence button 3 times	-	- 	 ×1
	Pairing succeeded	-	 ×1 every sec	 ×1

8.4 Abnormal mode

Green LED (Power)	Yellow LED (Fault)	Red LED (Alarm)	Buzzer	Cause	Solution
-	-	-	-	Power off	Reconnect AC mains power
 ×1 every min	-	-	-	AC mains off	
 ×1 every min	 ×1 every min	-	 ×1 every min	AC mains off & Low battery backup	
	 ×1 every min	-	 ×1 every min	Low battery backup	- DHI-HY-HT5MB: Replace battery - DHI-HY-HT5MA: Please refer to 错误!未找到引用源。5 错误!未找到引用源。

	 ×2 every min	-		Sensor fault	Replace alarm
---	---	---	---	-----------------	---------------

8.5 Low battery backup fault

If the battery backup supply is depleted, the buzzer will beep once accompanied by the yellow LED indicator flashing once every minute. Ensure that the green LED power indicator remains continuously illuminated. If it turns off or flashes every minute, the alarm is not powered by the standard 230V AC mains power, but it operates on the battery backup as its power source. To identify the cause of the power interruption, it is recommended to check the fuses, circuit breakers, and wiring. If in doubt, seek assistance from a qualified electrician. Once the mains power is restored, low battery alarm will stop within 24 hours as the battery charges up. If the beeping persists for over 24 hours with the green LED indicator on, there may be other problems with the alarm. Please repair or replace the alarm.



Do not disassemble the device without professional instruction.

8.6 Sensor fault

The alarm regularly checks the sensor for correct operation. If the alarm detects a sensor fault, it will emit 2 short chirps with the yellow LED indicator flashing twice every minute. In this case, please repair or replace the alarm.

9. Battery Replacement

There are two different types of battery backup:

- AC mains-powered with a rechargeable battery backup, which should be charging across the life span of the alarm.
- AC mains-powered with a replaceable 9 V alkaline battery back-up, which should be replaced after activating the alarm. When the device with a 9V alkaline battery backup gives a low battery warning, replace the battery immediately. It is recommended that you replace the battery every year. Only the following batteries can be replaced. Use of a battery other than those recommended below may have a detrimental effect on the device's operation.



Recommended battery: NANFU 6LR61 battery.

Step 1 Turn off the mains power to the alarm.

Step 2 Insert a flat-bladed screwdriver into the centre of the removal slot. Make sure you keep the screwdriver horizontal (i.e. parallel to the ceiling).

Step 3 Slide the alarm off the mounting plate.

Step 4 Replace the battery in the back of the alarm with a 9V alkaline battery.



When replace the battery, pay close attention to the positive and negative polarity markings (+ and -).

Step 5 Slide the alarm back on its mounting plate.

Step 6 Turn the power back on. The red LED indicator flashes once.

Step 7 Test the alarm to ensure it is working correctly.

10. Discard



Waste electrical products should not be disposed of your other household waste. Please dispose in an environmentally friendly manner, and strictly follow the local regulations regarding the disposal or recycling of the electrical device.



WARNING

Do not burn or throw into fire.

11. Warranty and Contact

If you need after-sales service, please contact your local dealer or retailer.

Western EU Importer: DAHUA EUROPE B.V.

Address: Houtsingel 19, 2719EA Zoetermeer, The Netherlands

Email address for service purposes: support@wisualarm.com

CEE&Nordic Importer: Dahua Technology Poland Sp.z.o.o.

Address: Poleczki Park Salsy 2, 02-823 Warszawa

Email address for service purposes: support@wisualarm.com

UK Importer: Dahua Technology UK Ltd.

Address: 3rd Floor, Quantum House, 60 Norden Road, Maidenhead, SL6 4AY

Email address for service purposes: support@wisualarm.com

Germany Importer: Dahua Technology GmbH

Address: Niederkasseler Lohweg 185, 40547 Düsseldorf, Deutschland

Email address for service purpose: support@wisualarm.com

12. Documents

Hereby, Zhejiang Huaxiao Technology Co., Ltd. declares that the radio equipment type Heat Alarm is in compliance with Directive 2014/53/EU.

The batteries contained in the product, if any, have been tested in compliance with Regulation (EU) 2023/1542.

The full text of the EU declarations of conformity and EU declarations of performance is available at the following internet address: <https://en.wisualarm.com/en/Download>



For more information, please scan the QR code below or visit <https://en.wisualarm.com/en/Product>

