

Tripod Turnstile

User Manual



Foreword

General

This manual introduces the functions and operations of the tripod turnstile (hereinafter referred to as the "turnstile").

Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
 DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
 TIPS	Provides methods to help you solve a problem or save you time.
 NOTE	Provides additional information as the emphasis and supplement to the text.

Revision History

Version	Revision content	Release Time
V1.0.6	Updated port description.	July 2025
V1.0.5	Updated safeguards and warnings.	December 2024
V1.0.4	Added Stainless Steel Maintenance.	October 2024
V1.0.3	Updated the diagrams.	June 2024
V1.0.2	Updated the diagrams.	December 2021
V1.0.1	Updated networking figure.	June 2021
V1.0.0	First release.	May 2021

Privacy Protection Notice

As the device user or data controller, you might collect the personal data of others such as their face, fingerprints, and car plate number. You need to be in compliance with your local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures which include but are not limited: Providing clear and visible identification to inform people of the existence of the surveillance area and provide required contact information.

About the Manual

- The manual is for reference only. Slight differences might be found between the manual and the product.
- We are not liable for losses incurred due to operating the product in ways that are not in compliance with the manual.
- The manual will be updated according to the latest laws and regulations of related jurisdictions. For detailed information, see the paper user manual, use our CD-ROM, scan the QR code or visit our official website. The manual is for reference only. Slight differences might be found between the electronic version and the paper version.
- All designs and software are subject to change without prior written notice. Product updates might result in some differences appearing between the actual product and the manual. Please contact customer service for the latest program and supplementary documentation.
- There might be errors in the print or deviations in the description of the functions, operations and technical data. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and company names in the manual are properties of their respective owners.
- Please visit our website, contact the supplier or customer service if any problems occur while using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Important Safeguards and Warnings

This section introduces content covering the proper handling of the Turnstile, hazard prevention, and prevention of property damage. Read carefully before using the Turnstile, comply with the guidelines when using it, and keep the manual safe for future reference.

Transportation Requirement



Transport the device under allowed humidity and temperature conditions.

Storage Requirement



Store the device under allowed humidity (40%–65% (RH)) and temperature (0°C–+40°C) conditions.

Installation Requirements



- Do not connect the power adapter to the Turnstile while the adapter is powered on.
- Do not connect the Turnstile to two or more kinds of power supplies, to avoid damage to the Turnstile.
- Please follow the electrical requirements to power the device.
 - ◇ Following are the requirements for selecting a power adapter.
 - The power supply must conform to the requirements of IEC 60950-1 and IEC 62368-1 standards.
 - The voltage must meet the SELV (Safety Extra Low Voltage) requirements and not exceed ES-1 standards.
 - When the power of the device does not exceed 100 W, the power supply must meet LPS requirements and be no higher than PS2.
 - ◇ We recommend using the power adapter provided with the device.
 - ◇ When selecting the power adapter, the power supply requirements (such as rated voltage) are subject to the device label.



- Install the Turnstile on a stable surface to prevent it from falling.
- Do not place the Turnstile in a place exposed to sunlight or near heat sources.
- Keep the Turnstile away from dampness, dust, and soot.
- Install the device in a well-ventilated place, and do not block its ventilation.
- Use an adapter or cabinet power supply provided by the manufacturer.
- The Turnstile is a class I electrical appliance. Make sure that the power supply of the Turnstile is connected to a power socket with protective earthing.

Operation Requirements



- Make sure that the power supply is correct before use.
- Do not unplug the power cord on the side of the Turnstile when the adapter is powered on.
- Operate the Turnstile within the rated range of power input and output.
- Transport, use and store the device under allowed humidity and temperature conditions.
- Do not drop or splash liquid onto the Turnstile, and make sure that there is no object filled with liquid on the Turnstile to prevent liquid from flowing into it.
- Do not disassemble the Turnstile without professional instruction.
- When the Turnstile is used with access controller and the lock port connects to the K1 or K2 port of the main control board, configure the unlock duration for the access controller as 0.2 seconds.
- Prepare a separate power adapter when install a face recognition access controller.

Maintenance Requirements



- After the installation, remove the protective film and clean the Turnstile.
- Regularly perform maintenance on the Turnstile to ensure that it works properly.
- If the Turnstile is installed near places with poor air, such as a swimming pool entrance, within 50 km of the sea or a construction site, then maintenance must be performed more frequently on the stainless cover.
- Do not use paint thinner or any other organic agent during maintenance.
- When using a face detection component, apply waterproof silicon sealant to the installation position.

Precautions



- Pregnant women, the elderly, and children must be accompanied when passing the Turnstile.
- Children less than the height of 1 m must pass the Turnstile in the arms of or alongside an adult.
- Do not stay or play in the passage.
- Make sure that your suitcase passes in the front or alongside you.
- Only one person can pass through at a time. Do not tailgate a person, linger in the passage or break through the passage.
- Violent impact might damage the machine core and shorten the service life of the Turnstile.
- Make sure that the Turnstile is correctly grounded to prevent personal injury.
- Do not use the Turnstile when thunder occurs.



- When authorizing a person to pass through the Turnstile, there should be no person on the opposite side of the Turnstile, otherwise the barriers will remain unlocked until the person on the opposite side exits.
- Pass through the Turnstile as soon as possible after authorization. If the person does not enter within the specified time, the system will automatically close the barriers.
- When multiple persons are entering, they can pass with continuous authorization when memory mode is enabled. But the interval between continuous authorizations is recommended to be 2 s–5 s.
- Pay attention to the status of the indicator when verifying a person's identity. Red indicates that the identity of the person was not verified. Green indicates that their identity was successfully verified, and that the person can pass through.
- Do not try to forcibly pass through the passage. This Turnstile supports intelligent anti-tailgating and anti-reverse intrusion. If you forcibly break through, the system will automatically lock, closing off the passage. This can result in a person becoming injured.
- The Turnstile will not correctly recognize the authorized card if it is used together with other cards.
- Keep the authorized card well to make sure it works properly.
- Do not pass items through the Turnstile, otherwise the Turnstile will consider the item as unauthorized.
- If the Turnstile is used with the face recognition access controller, when the lock port on the face recognition access controller is connected to the K1 or K2 port on the main control board on the Turnstile, the unlock duration for the face recognition access controller should be configured as 0.2 seconds.

- If the Turnstile is used with the face recognition access control device, the separate power adapter must be prepared.

Table of Contents

Foreword	I
Important Safeguards and Warnings	III
1 Overview	1
1.1 Introduction	1
1.2 Features	1
1.3 Access Control Mode	1
2 Application	1
3 Structure	2
3.1 Appearance	2
3.2 Dimensions	3
3.3 Inner Components	3
4 Installation	5
4.1 Safety Instructions	5
4.2 Preparations	5
4.2.1 Tools	6
4.2.2 Wiring	6
4.2.3 Cable Layout	8
4.3 Installation Procedure	9
4.3.1 Drilling Holes	9
4.3.2 Adjusting Turnstile Position	10
4.3.3 Fixing the Turnstiles	12
4.3.4 Drilling for a Face Recognition Access Controller	13
5 Cable Connection	15
5.1 Control Board Port Description	15
5.2 Wiring	16
6 Commissioning	20
6.1 DIP Switch on Control Board Setting	20
6.1.1 Setting Work Mode	20
6.1.2 Setting Memory Mode	20
6.1.3 Setting Passing Mode	20
6.1.4 Setting Passing Time	21
6.1.5 Setting Turnstile Type	21
6.1.6 Setting Voice Volume	21
6.1.7 Setting in & out Broadcast	21
6.2 Debug	21
6.3 Self-checking	22
7 FAQ	23
Appendix 1 Maintenance Cycle	24
Appendix 2 Maintenance Methods	25
Appendix 2.1 Rust and Adhesive Failure Prevention	25
Appendix 2.2 Removing Marks and Rust	25
Appendix 2.3 Cautions	26
Appendix 3 Security Recommendation	27

1 Overview

1.1 Introduction

The turnstile controls access for locations such as hotels and government facilities. When the turnstile is powered off, the arms will normally unlock themselves, and people can pass freely. When the turnstile is powered on, you need to rotate the arms to pass.

1.2 Features

- Supports anti-collision.
- Supports setting passing time.
- The arms will be locked automatically if no one enters the turnstile after the specified time.
- The lock and unlock feature of the turnstile can be controlled by a remote controller (not provided).
- System parameters can be restored to default through the configuration application.
- Supports sound and light alarm prompts and volume adjustment.
- Data on the entry and exit of people can be collected. Also, the turnstile arms fall down automatically when powered off.
- When receiving fire alarm signals, the turnstile normally will open. The turnstile can also output alarm signals.
- 9 passing modes: Pass with identity verified, not allowed to pass, and pass without restrictions, and you can combine these to produce 9 passing modes.

1.3 Access Control Mode


You can set the passing mode based on the direction people enter or exit the controlled area.

- People can pass the turnstile using their face.
- People can pass the turnstile freely without identity verification.
- No passage allowed.

2 Application

Faces are collected and imported to turnstiles through the network.

Figure 1-1 Application

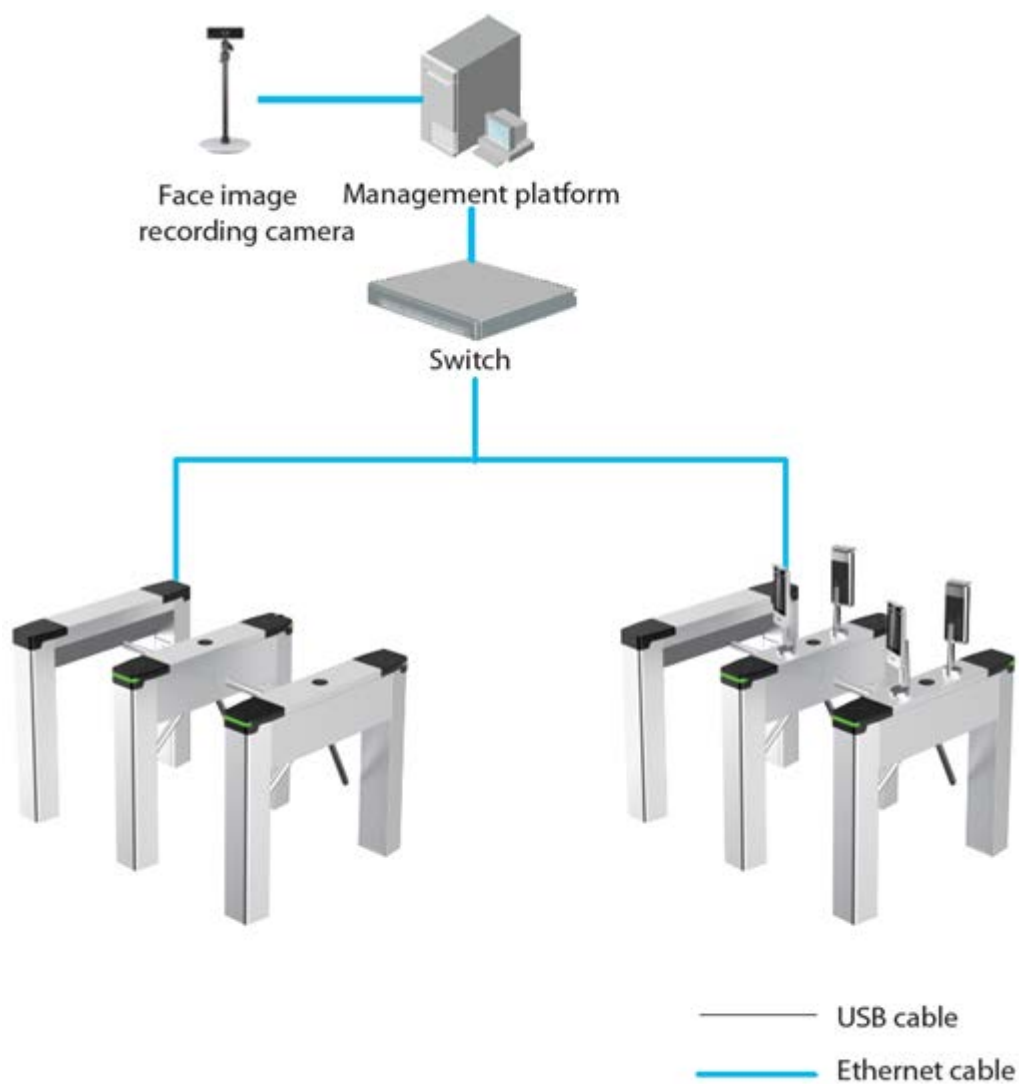


3 Structure

3.1 Appearance

Figure 3-1 Appearance (1)




Figure 3-2 Appearance (2)

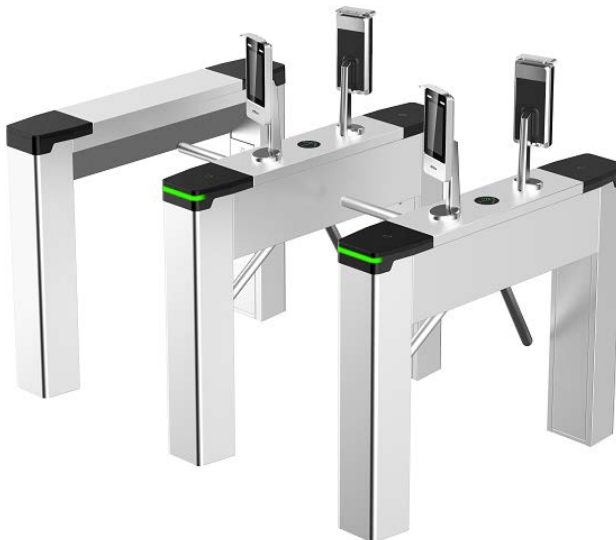

3.2 Dimensions

Figure 3-3 Dimensions (mm[inch])

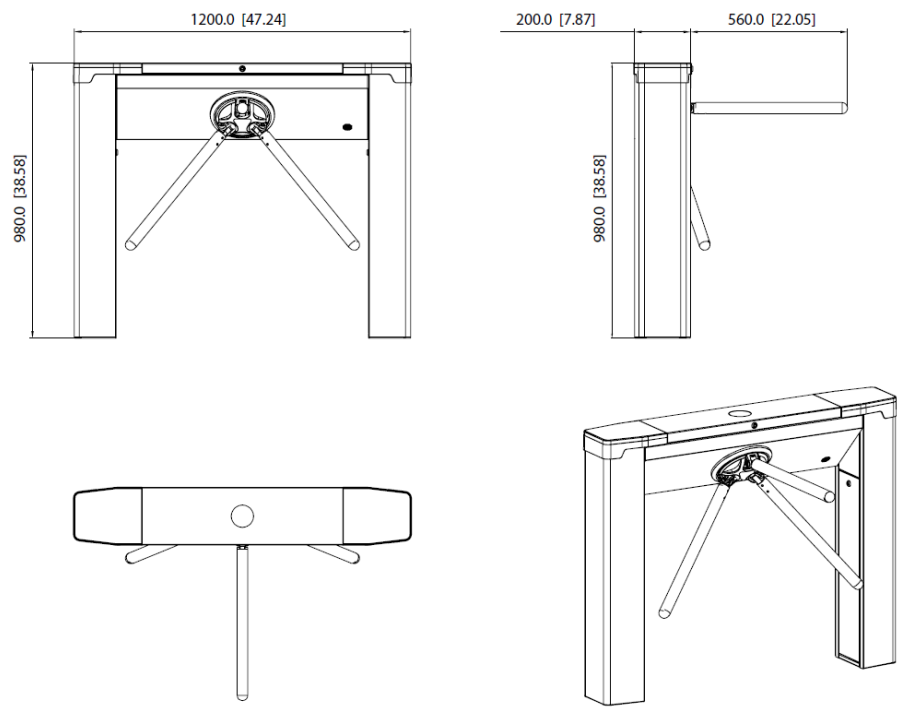

3.3 Inner Components

Figure 3-4 Inner components

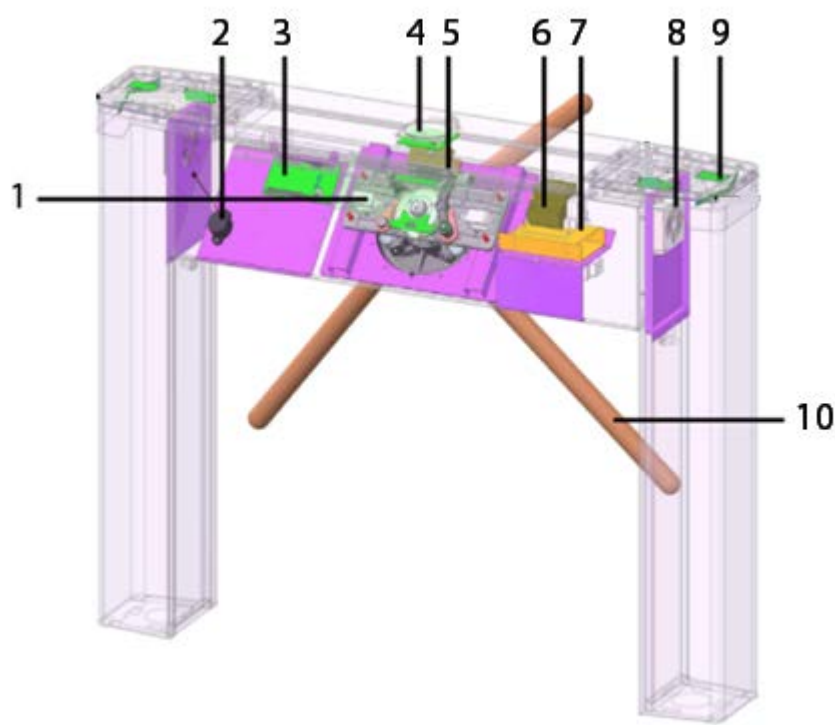


Table 3-1 Component description

No.	Item	Description
1	Passing electromagnetic lock	Receives signals from the control board, and locks or unlocks the arms.
2	Speaker	Broadcast voice prompts.
3	Passage control panel.	Receives and processes signals from the access controller, and controls the electromagnets and direction indicator.
4	Direction indicator	● Two-way authorization. ◇ Solid red X: Stand by. ◇ Flashes a green arrow in passing direction: Authorization successful. The turnstile returns to standby mode when the person passed or it times out. ◇ Flashes a red X 3 times and broadcasts Authorization failed: Authorization failed. The turnstile returns to standby mode. ● One-way authorization. ◇ Solid green arrow: Stand by. ◇ Flashes a green arrow: Authorization successful. The turnstile returns to standby mode when the person passed or it times out. ◇ Flashes a red X 3 times and broadcasts Authorization failed: Authorization failed. The turnstile returns to standby mode. ● Free pass: Solid green arrow means the authorization succeeded.
5	Electromagnetic chuck lock	When the power is on, the arms can be set in a horizontal position by folding them to their maximum extent, and then lifting them up again. When the power is off, the arms will automatically fold themselves.
6	Circuit breaker	Protects the turnstile circuit.
7	Power switch	Convert the input voltage to 24 VAC power.
8	Fan	Dissipates the heat caused by the turnstile.
9	Passage indicator	Indicates passing status.
10	Turnstile arm	Arms of the turnstile.

4 Installation

This chapter introduces the installation requirements, preparations, and installation procedures.

4.1 Safety Instructions



WARNING

- Strictly conform with the requirements of the manual during installation, otherwise we will not be responsible for any loss occurred.
- Incorrect installation or improper operation might bring damages to humans or objects.
- Security devices and control devices used must confirm to EN12978.
- Before installing, wiring, or disassembling the turnstile, unplug the power supply first.
- The turnstile consists of various mechanical and electrical devices, any negligence during installation might cause damage.
- In case of smoke, unpleasant odor, or strange noise, unplug the turnstile immediately, and then contact technical support.
- Pay extra attention when you are operating inner components that are electrically charged or can cause the arms to move.
- Do not disassemble the turnstile unless necessary, otherwise people injury or property damage might occur.




- Firmly attach the turnstile.
- Make sure that the ground cable works properly before powering on the turnstile.
- Before making the turnstile operational, make sure that people can see the turnstile completely and clearly to avoid injury.
- Do not operate the turnstile while standing in the passage when it is powered on.
- After installing the Turnstile, make a stainless steel maintenance at once.

4.2 Preparations

- Make sure that the turnstile is installed on a flat surface.
- If the turnstile is to be installed outdoors where water pooling is likely to occur, it must be installed on a 50 mm–150 mm cement base (adjust according to the actual situation). The passage also should be elevated to the same height of the cement base. Apply silicon sealant to the gap between the cement base and the turnstile to keep out water and condensation.
- Make sure that the PVC pipe is buried more than 60 mm under the ground, and the height of the PVC pipe above the ground should be more than 50 mm. Bend the PVC pipe end that is above the ground to keep water out. Keep the installation surface dry.
- Clean the installation surface.
- Confirm the installation position.

Figure 4-1 Installation position (mm[inch])

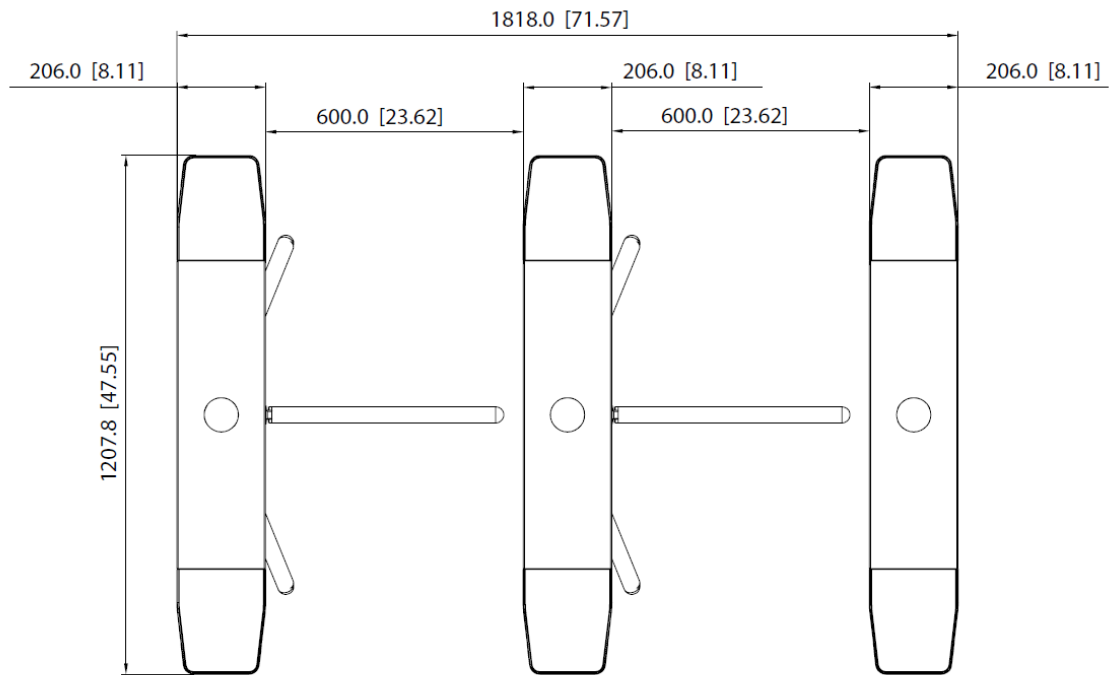

4.2.1 Tools

Tools might vary based on different installation surfaces.

- Cement.
Percussion drill, drill No.16 and No. 32, marking pen, tape measure, spirit level, plumb bob (for calibrating the levelness of the passage), hammer, wrench, angle grinder or cutting machine, and screwdriver.
- Marble and ceramic.
Because marble and ceramic grounds are fragile, use the pistol drill to drill a hole first, apply cooling water, and then keep drilling until the hole is deep enough. Remove the dust inside the hole with water, and then use the percussion drill for the dimensions you need.

4.2.2 Wiring

- Check if the labels on the cables are clear. If not, make them clear.
- AC power cables and communication cables cannot be on the same pipe.
- PVC pipes should be buried under the ground for more than 150 mm to avoid damage from expansion bolts. The pipe above the ground should be longer than 50 mm to keep water out.
- The PVC pipes must be able to go through the cable entry of the installation base.

Figure 4-2 PVC pipe layout (mm[inch])

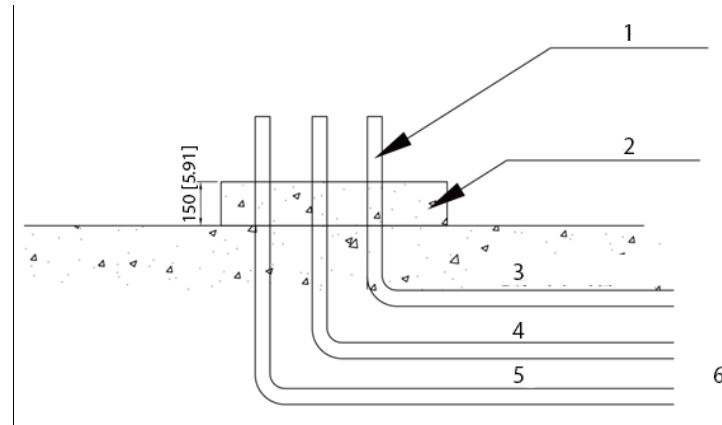


Table 4-1 PVC pipe layout description

No.	Name
1	1" PVC pipe
2	425# concrete base
3	Power cable pipe
4	Signal cable pipe
5	Communication cable pipe
6	Signal and communication cables are connected to the security booth

For needed cables and their specification, see the figures and table below.

Figure 4-3 Wiring for one face recognition access controller

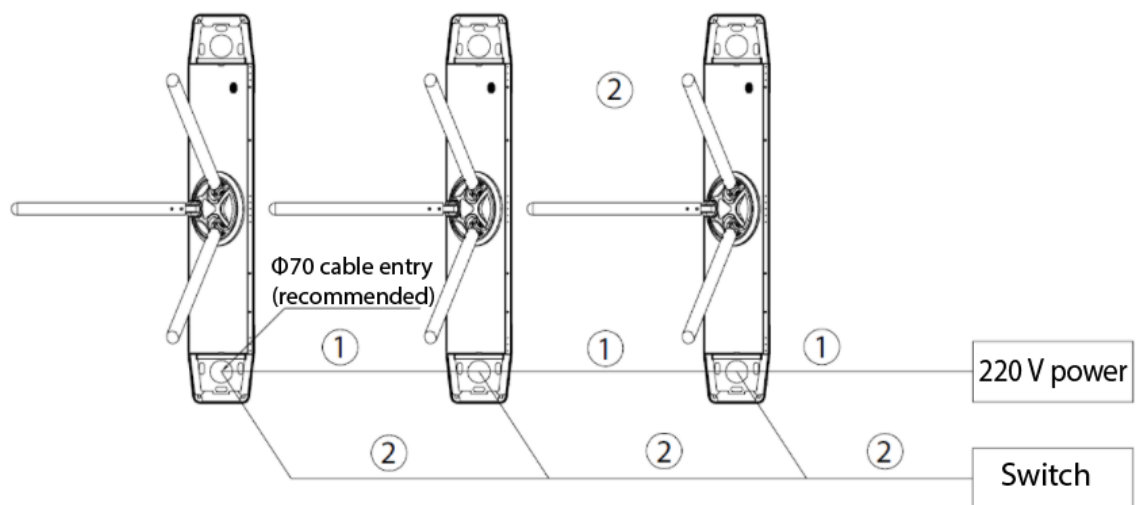


Figure 4-4 Wiring for two face recognition access controllers

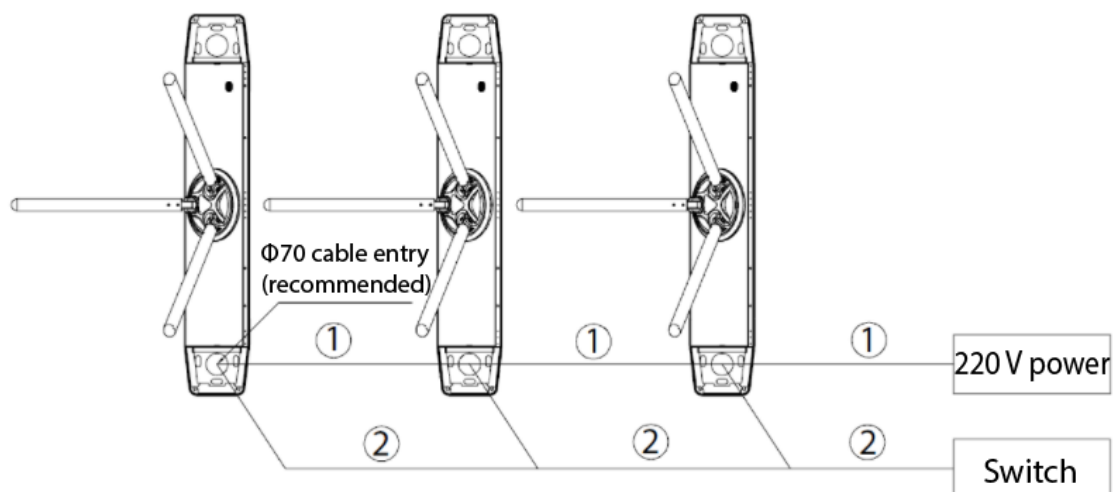


Table 4-2 Cable description

No.	Type	Description
1	Power cable	One 220 V RVV3 × 2.5 power cable for each turnstile. Reserve 3 m of the cable outside the cable entry.
2	Ethernet cable	- One Cat5 Ethernet cable for one face recognition access controller. Reserve 3 m of the cable outside the cable entry. - Two Cat5 Ethernet cables for two face recognition access controllers. Reserve 3 m of each cable outside the cable entry.

4.2.3 Cable Layout

For recommended cable layout, see Figure 4-5. If you incorrectly lay cables like in Figure 4-6, the turnstile can end up being installed in an unstable position causing cables to break when expansion bolts are being hammered in.

Figure 4-5 Recommended cable layout (mm[inch])


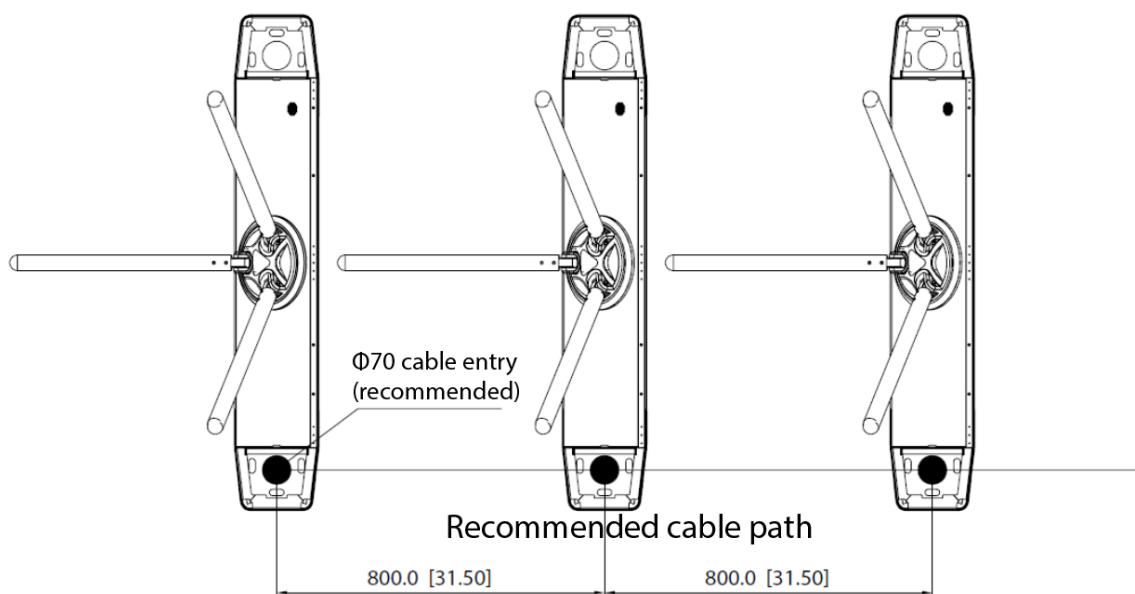


Figure 4-6 Wrong cable layout

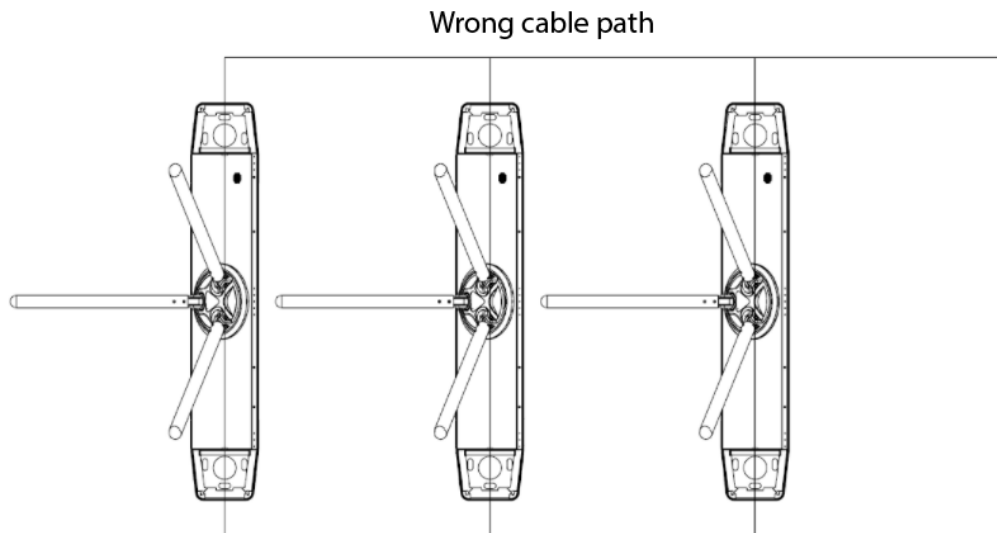


4.3 Installation Procedure

4.3.1 Drilling Holes


Before installing the turnstiles, make sure that the distance "M" between buildings and the turnstile is no less than 60 mm, and no more than 100 mm. Adjust it according to the actual situation. This is for maintenance purposes and not for allowing people to pass through.

Figure 4-7 Install turnstiles next to buildings

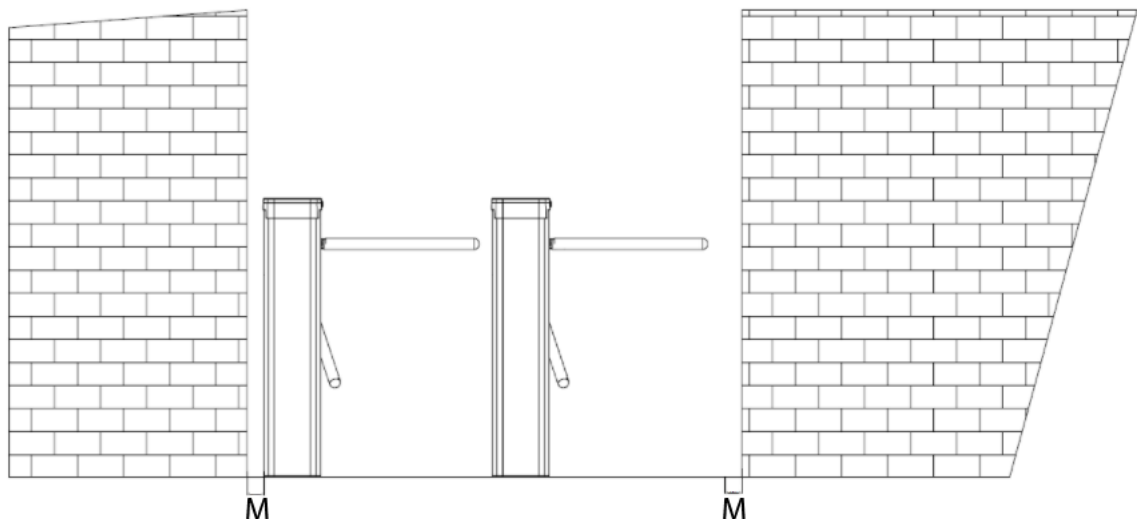

- Step 1** Adjust all turnstiles to face the same direction.
- Step 2** Confirm the distance between buildings and the turnstiles.
- Step 3** Confirm the installation position and mark the holes.

Figure 4-8 Mark the holes on the installation surface (mm[inch])

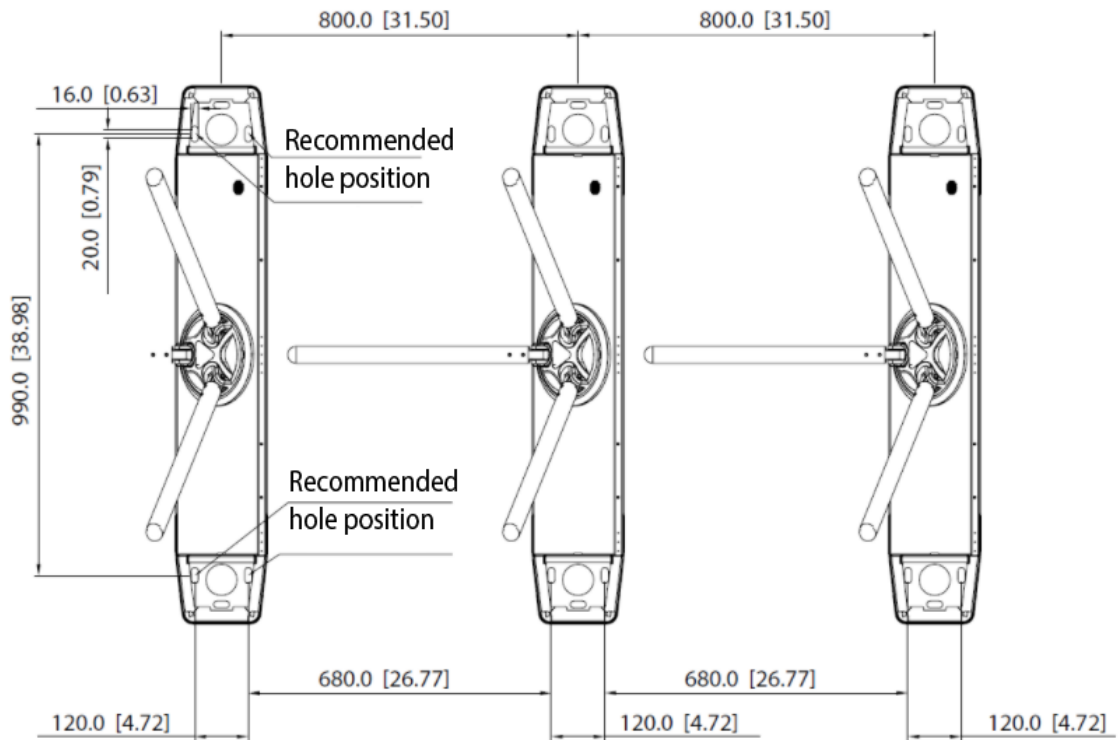

Step 4 Drill holes. See the table below for hole diameters and depth, and expansion bolt diameters.

Table 4-3 Expansion bolt specification

Item	Dimension
Expansion bolt	M12 × 120
Hole depth	95 mm
Hole diameter	16 mm

Step 5 Use compressed air to remove the dust in the holes. Repeat this step no less than three times.


Step 6 Hammer the expansion bolts into the bottom of the hole.

Step 7 Use a wrench to tighten the nuts, and then hammer the expansion bolts again.

4.3.2 Adjusting Turnstile Position


Step 1 Use the key to open the top panel.

Figure 4-9 Open the top panel

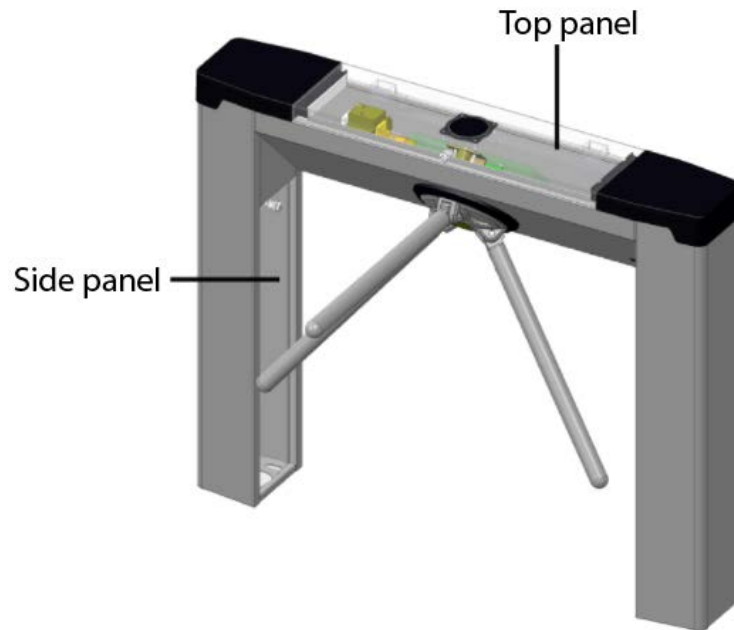

Step 2 Tug all the cables inside the turnstile through the cable entry, and keep them organized to avoid damage.

Figure 4-10 Cable entry

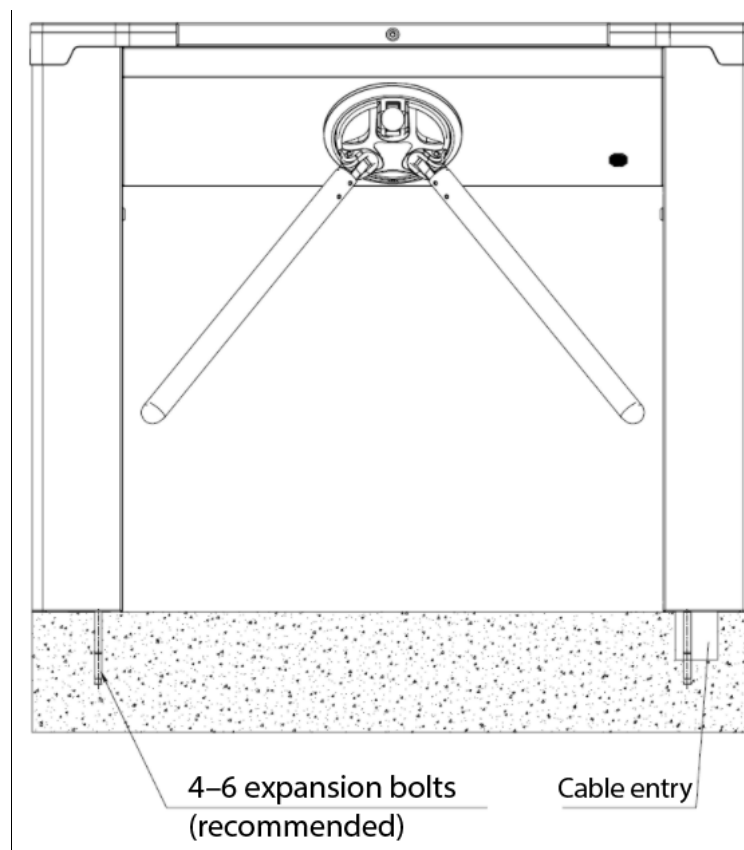


Step 3 Carefully lift the turnstile up and adjust its position, overlap the holes on the turnstile with the expansion bolts, and then place the turnstile on the ground.

Step 4 Use gaskets to level the turnstile.

Step 5 Mark three evenly separated points on the installation surface horizontally or vertically along the turnstile. Use a gradienter to measure the angle of inclination of the three points. See the figure below for the acceptable flatness error.

Figure 4-11 Acceptable flatness error

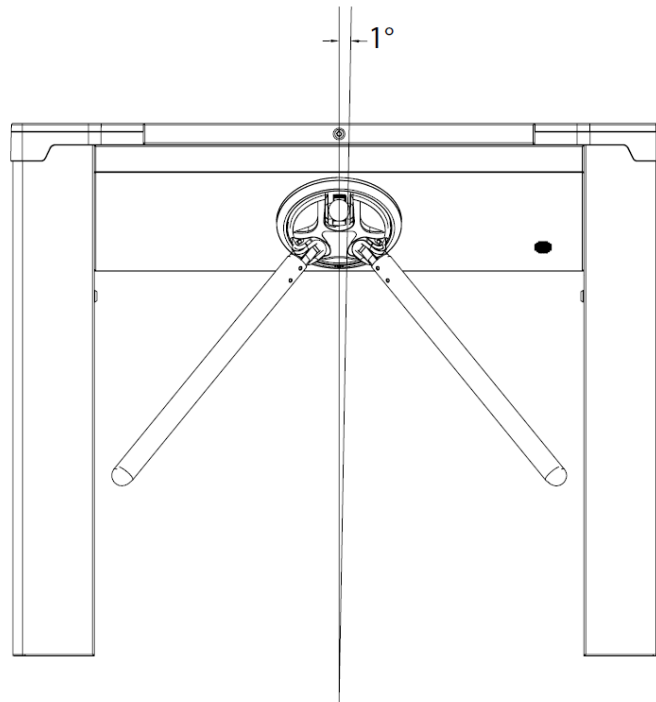


Step 6 Repeat Step 1–Step 5 to install other turnstiles.



- The arms of different turnstiles must face the same direction.
- Make sure that the turnstiles are aligned within deviation.


Figure 4-12 Align the turnstiles within deviation (mm[inch])

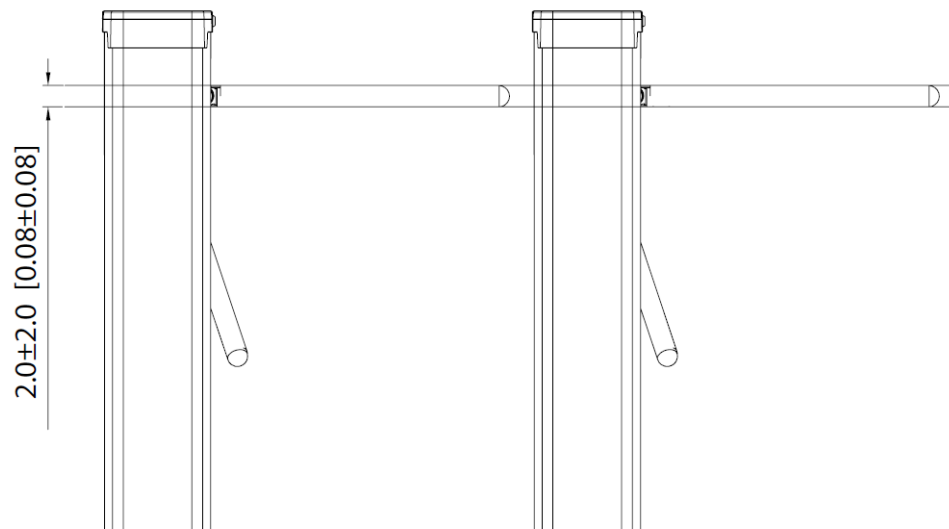

4.3.3 Fixing the Turnstiles

- Step 1** After adjusting the turnstile position, put an M12 flat gasket, M12 spring gasket, and an M12 nut on the expansion bolt, and then manually tighten the nut.
- Step 2** Tighten all the nuts with a wrench.
- Step 3** Apply silicone sealant to the gap between the turnstile and the ground to avoid water leakage.

Figure 4-13 Attach the turnstiles

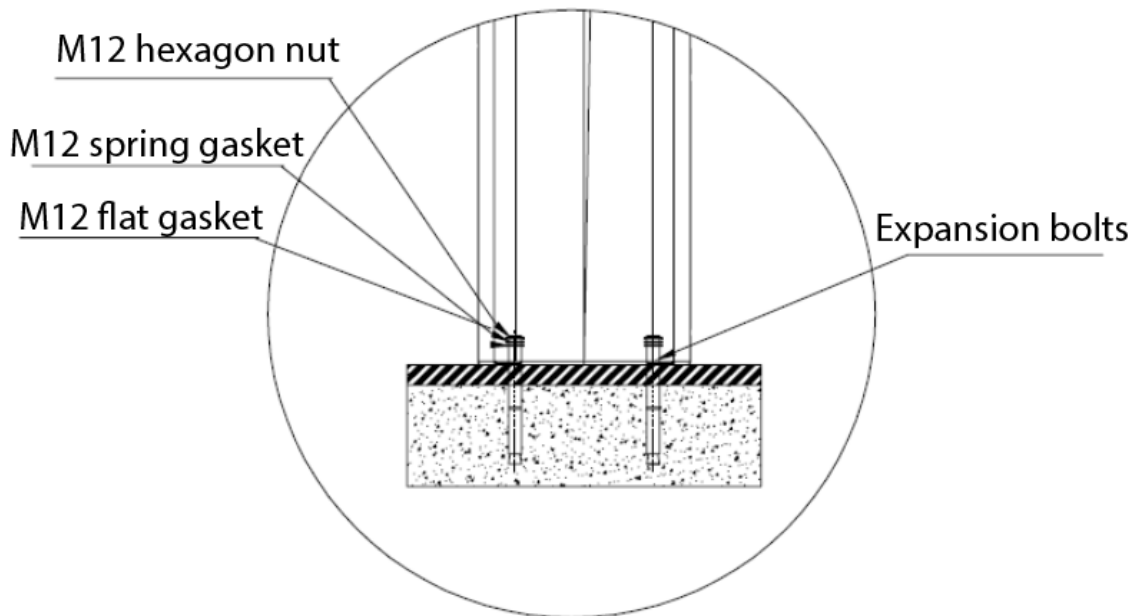

4.3.4 Drilling for a Face Recognition Access Controller

If you need to install a face recognition access controller, you need to drill a hole on the top cover of the turnstile.

Prerequisites


- Installation of the turnstile is complete.
- The turnstile works normally during commissioning. See "6 Commissioning".
- Power off the turnstile.
- Only simple brackets and converters of the face recognition module need to have holes drilled on site (the cable entry of the face recognition module is waterproof).

Procedures

Step 1 Open the top cover, and then lay a piece of paper over all the inner components to prevent the iron dust from damaging them.

Step 2 Use a marker to mark the drilling position.

Figure 4-14 Drilling position (mm [inch])

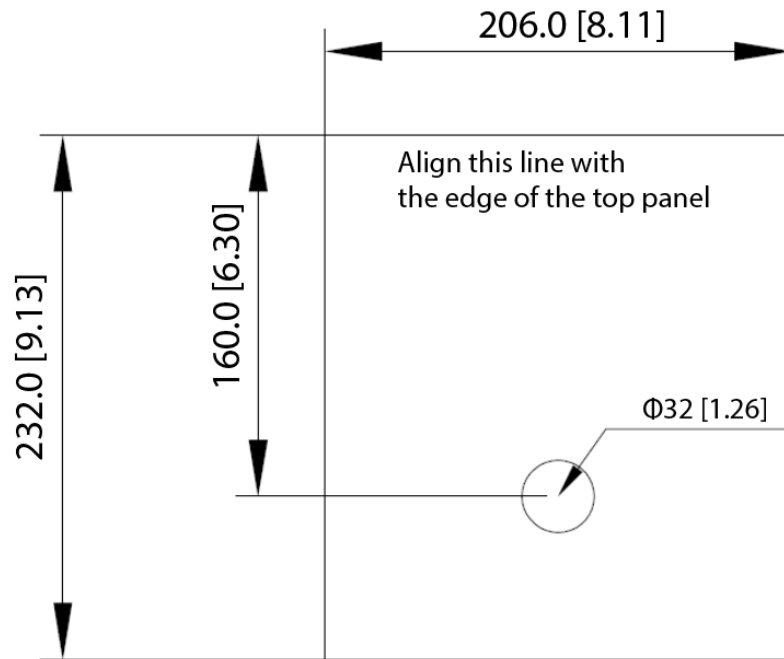

- Step 3 Drill a hole on the mark with the diameter shown above.
- Step 4 Use a file to clean off the burrs around the hole and remove the iron dust inside the turnstile.
- Step 5 Install and fix the face recognition module to the turnstile.

5 Cable Connection

5.1 Control Board Port Description

Figure 5-1 Control board ports

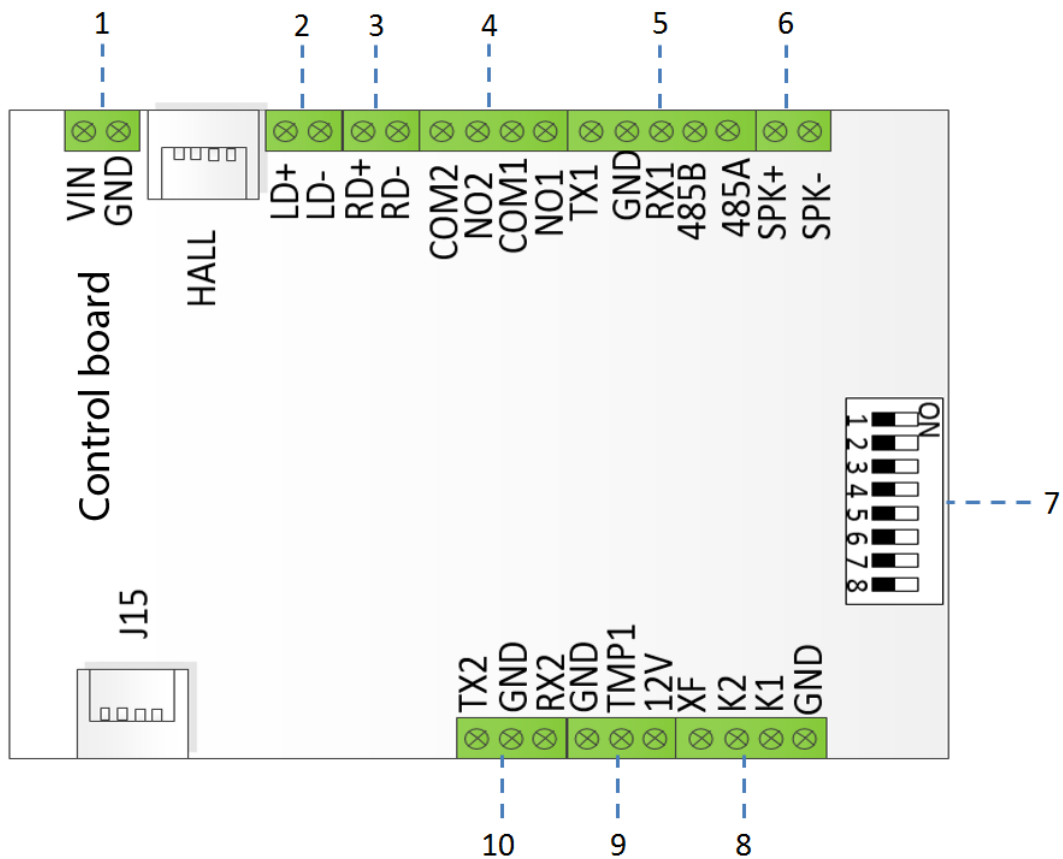


Table 5-1 Port description

No.	Port	Description
1	GND, VIN	24 V DC/6.5 A power input for control board.
2	LD+, LD-	Providing operating voltage for card reader.
3	RD+ RD-	
4	COM1/NO1	Entry signal.  Both relay outputs can be set to the alarm output signal.
	COM2/NO2	Exit signal.
5	TX1, GND, RX1	RS-232.
	485A, 485B	RS-485.
6	SPK+, SPK-	Speaker.
7	DIP switch	It is 00000000 by default (eight 0s).
8	K2, GND	Signal port for opening the turnstile on exit. It can receive the open turnstile signal from the control board or the face recognition module.

No.	Port	Description
	K1, GND	Signal port for opening the turnstile on entry. It can receive the open turnstile signal from the control board or the face recognition module.
	XF, GND	Fire alarm signal input port. When a signal is received, the turnstile arm automatically falls down. To power on the turnstile, you need to manually push the arm down, and then lift it up to a level position.
9	TMP1, GND	Reserved port.
	12 V, GND	Provides operating voltage for the fan.
10	TX2, GND, RX2	RS-232.

5.2 Wiring



- For wiring with the access controller, set the DIP switch of the access controller board to 00000000 (default).
- For wiring with the face recognition module, set the DIP switch of the access controller board to 00000001.
- The default IP of the face recognition access controller is 192.168.1.108. The default username and password are admin and admin123 respectively.
- The unlock duration for the face recognition access controller should be configured as 0.2 seconds.
- A separate power adapter is required when you install a face recognition access controller.

Figure 5-2 Cable connection with the access controller

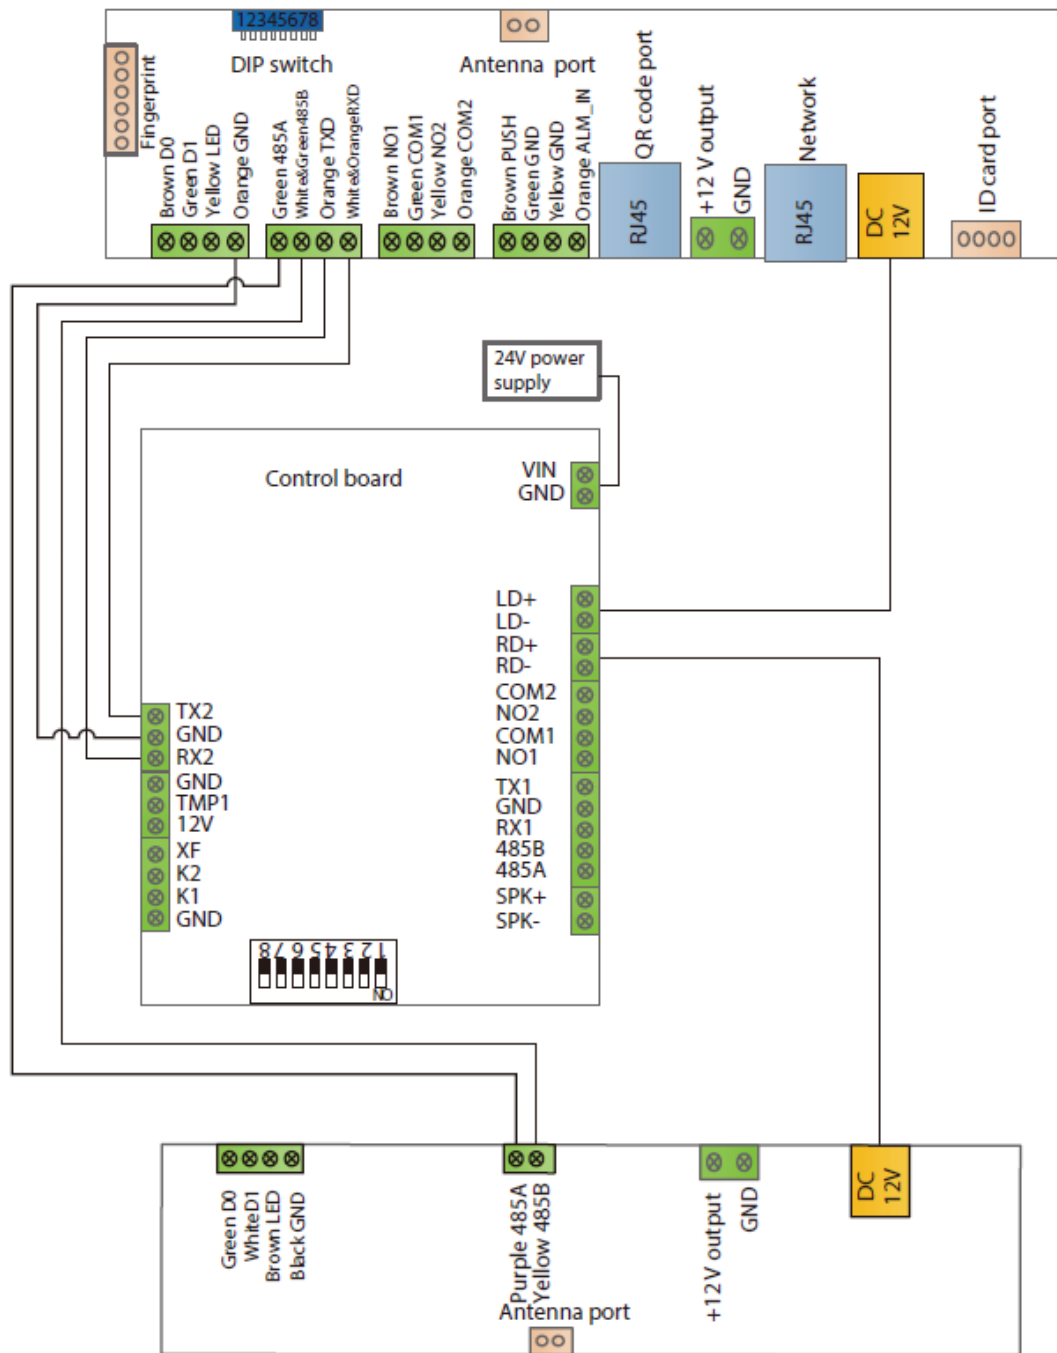


Figure 5-3 Cable connection with the ASI7/8 series face recognition module


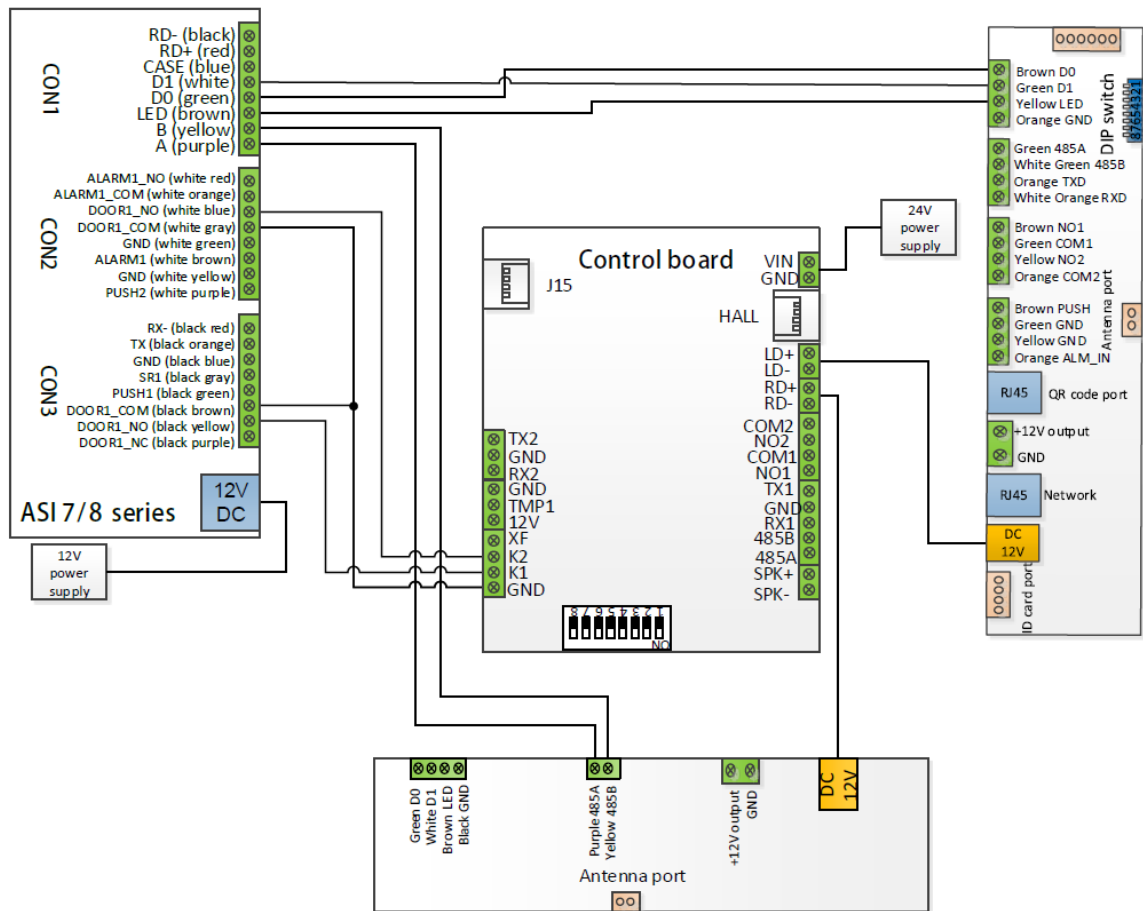



Figure 5-4 Cable connection with two ASI7/8 series face recognition modules

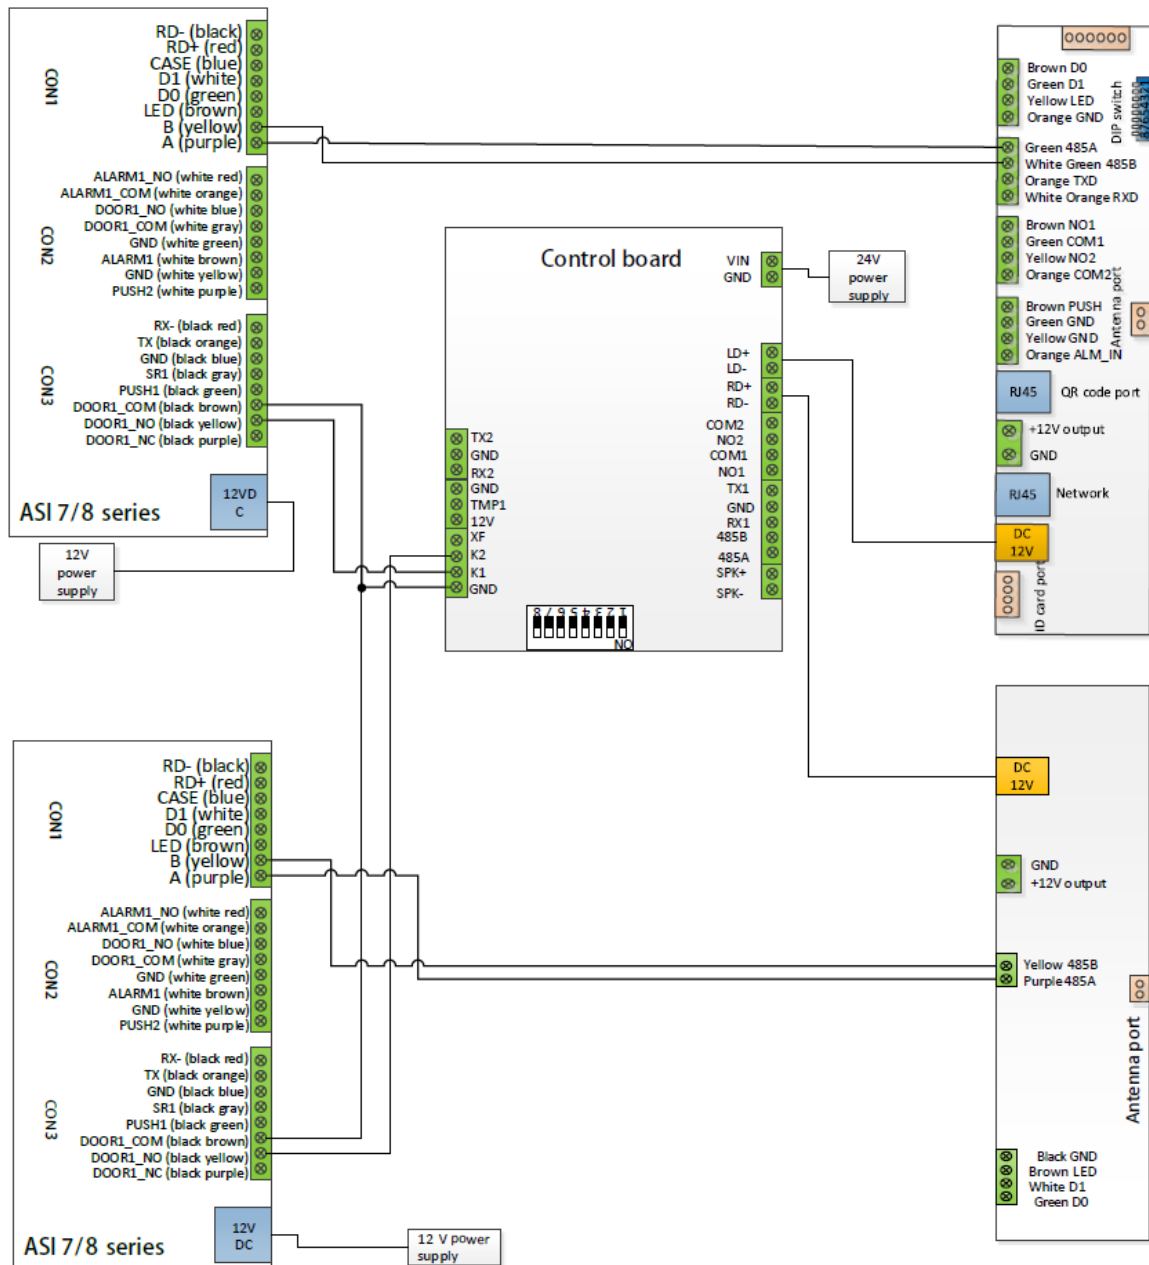

6 Commissioning

6.1 DIP Switch on Control Board Setting

Figure 6-1 DIP switch

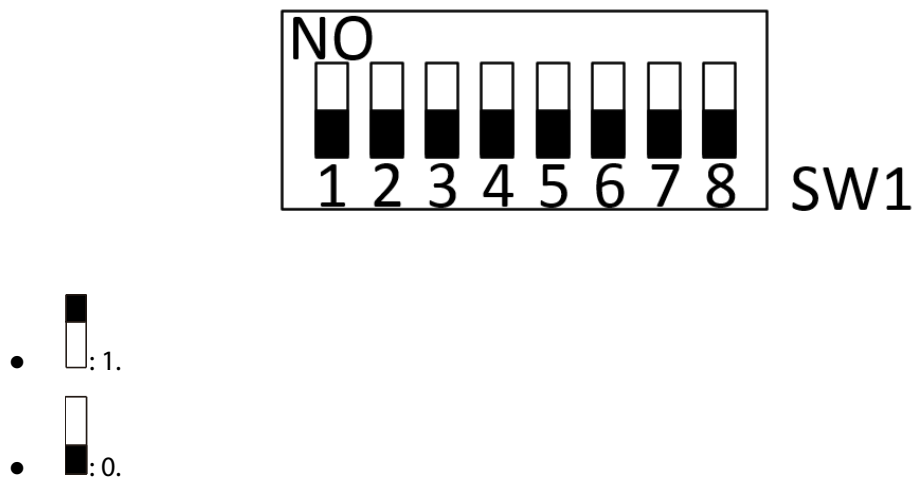

6.1.1 Setting Work Mode

Set working mode through the DIP switch or the configuration application.

Table 6-1 Buttons description

SW1-1	Description
0	Normal mode
1	Test mode

6.1.2 Setting Memory Mode

Set memory mode through the DIP switch or the configuration application.

Table 6-2 Buttons description

SW1-2	Description
0	Close (default)
1	Enable

6.1.3 Setting Passing Mode

Set passing mode through the DIP switch or the configuration application. It takes effect after 1 second of the DIP switch being configured.

Table 6-3 Buttons description

SW1-3	SW1-4	SW1-5	SW1-6	Description
0	0	0	0	In&Out-ID (default)
0	0	0	1	In-ID/Out Free
0	0	1	0	In-ID/Out Banned
0	0	1	1	In-Free/Out-ID
0	1	0	0	In&Out-Free
0	1	0	1	In-Free/Out Banned
0	1	1	0	In-Banned/Out-ID
0	1	1	1	In-Banned/Out-Free
1	0	0	0	In & Out Banned

6.1.4 Setting Passing Time

Table 6-4 Buttons description

SW1-7	SW1-8	Description
0	0	5 s (default)
0	1	10 s
1	0	30 s
1	1	60 s

6.1.5 Setting Turnstile Type

Set the turnstile type to tripod through the configuration application.



Restoring to factory settings will not result in data loss.

6.1.6 Setting Voice Volume

Set the voice volume level among 1–8 through the configuration application.

6.1.7 Setting in & out Broadcast

You can set in & out broadcast through the configuration application.

6.2 Debug

- All components of the turnstile work normally. The turnstile has been tested but the component connection might still be slightly different.
- The cable is properly connected.

- Power on the turnstile after completing above operations. Because the arm will automatically fall when powered off, you need to push the arm down and then lift it to a level position to restore the turnstile to its normal status when powered on.
- Set the passing mode to In & Out Free, and people can manually turn the arm to pass from either direction. The turnstile closes automatically after people pass.
- Check whether the electromagnetic chuck works properly and the turnstile arms fall normally when powered off.
- After issuing card or granting face permissions, run the turnstile a few times. Check the authorization and then check whether the arms can rotate in the authorized direction and rotate smoothly.

Set the passing mode to the targeted mode after completing all these procedures.

6.3 Self-checking

You need to manually push the arms down and then lift them up to a level position every time the turnstile restarts for it to work normally.

7 FAQ

The power indicator light is not on after the turnstile is powered on.

- Check whether the air switch is turned on.
- Check whether the power input of the switch is normal.
- Check whether the cables are properly connected.

After swiping a card, the electromagnetic chuck is still locked.

- Check whether the card is valid.
- Check whether the user permission is issued successfully.
- Check whether the cable connection between the information collection board and access controller is normal.

No voice prompts when passing.

- Check whether the cable connection of the speaker is correct.
- Check whether the audio prompts are successfully configured through the configuration application.

The direction indicator is not on.

Check whether the cables of the direction indicator are correctly connected.

The arms are not folded after the turnstile is powered off.

Check whether the fixing screw of the electromagnetic chuck module is loose.

The arms cannot be lifted up after the turnstile is powered on.

- Manually push the arms down to their lower limit and then lift them up to a level position.
- Adjust the position of the electromagnetic chuck bracket before fixing it to the turnstile.

The arms cannot be rotated after swiping a card, or they can be rotated without swiping a card.

- Check for any loose nuts or screws.
- Apply lubricant to the moving parts of the electromagnets.
- Adjust the position of the direction electromagnet bracket before fixing it to the turnstile.

Appendix 1 Maintenance Cycle

Maintain the turnstile regularly to ensure long service life.

Cleaning the Surface

- Maintenance cycle for a good environment (adjustable according to the on-site environment):
 - ◇ Outdoor: Once every five days, and every time after it rains.
 - ◇ Indoor: Once every seven days.
- Maintenance content: Clean the surface and the arms.
 - ◇ Use a piece of soft cloth soaked with a neutral detergent or clean water, and then clean the surface and arms of the turnstile. If the turnstile is covered in rain, clean after it is dry.
 - ◇ High salinity and humidity environment, acid rain, and sweat will corrode the surface made of stainless steel. Use scour pads to clean the rust first (you can also use rust remover at the same time), and then use a piece of soft cloth soaked in a neutral detergent or clean water to clean the surface and arms of the turnstile.

Cleaning the Interior



Do not use water to clean the interior, otherwise a short circuit might occur.

- Once every three months.
- Maintenance content:
 - ◇ Disconnect the power supply, open the top panel, and then remove the dust inside the turnstile.
 - ◇ Make sure that the motor, bearing, fastening pieces, connection bars, and screws are all tightened.
 - ◇ Apply anti-corrosive lubricant to the bearing rods, gears, and other moving parts.
 - ◇ Check if there are any loose connections. If yes, wrap the cables together, tighten the connectors, or follow any other similar measures that should be applied. Replace bad cables if any.
 - ◇ Regularly check if all the functions are normal.

Appendix 2 Maintenance Methods



After installing the Turnstile, make a stainless steel maintenance at once.

Appendix 2.1 Rust and Adhesive Failure Prevention

Rusty stainless steel and adhesive failure will only happen if the turnstile is used or maintained inappropriately, or in harsh environments.

Rust Prevention

Do not expose the turnstile to substances that might cause it to rust.

- Ions, sulfur oxide, acidic substances that contain HCL and H_2SO_4 , or substances that produce acidic substances (such as SO_4 , salt, and HClO) after dissolving in water will damage the passive film on the stainless steel.
- Substances like soot and dust will disturb the regeneration of the passive film on the stainless steel.
- Metal powder that mostly contains iron will stick to the stainless steel and get rusty.

Adhesive Failure Prevention

- After applying protective film to the stainless steel, ensure to protect it from UV rays (direct sunlight), heat, and pressure to avoid adhesive failure.
- After installing a face recognition access controller, apply silicon sealant to the installation hole to prevent water leakage, and reapply it every two years.

Appendix 2.2 Removing Marks and Rust

Removing Marks from Taking off the Protective Film

Use a sponge or cloth dipped with alcohol, naphtha, banana oil, or a mixed solution of ethyl alcohol and methylbenzene (or acetone) to clean marks left behind from removing the protective film. These chemicals are in ascending order of intensity. Use a clean cloth to scrub the stainless steel until the solution dries up. You can also use any other stainless steel cleaner. No matter which method you use, clean the surface thoroughly afterwards with clean water.

Removing Palm Marks

A neutral detergent or soap should be enough; otherwise, use an organic solution (such as alcohol, and naphtha). After scrubbing the surface with a solution, use a clean and dry cloth to wipe off the solution. Stainless steel cleaner is recommended.

Removing a Small Amount of Rust

Use a stainless steel cleaner.

Removing a Larger Amount of Rust

If metal powder rusts on top of the stainless steel and is not removed in time, the stainless steel will get rusty itself. Also, if rust caused by salts or other rust-inducing items are not removed in time, it will get worse. For these two situations, you have to use the specialized stainless steel cleaner. If the cleaner is not strong enough, use sand papers or a stainless steel brush to remove some of the rust, and be careful not to damage the stainless steel surface, and then apply the cleaner.

Appendix 2.3 Cautions

Cleaning Requirements

- Cut off the power supply before cleaning the turnstile. Make sure that water cannot make contact with the components inside.
- The detergent you use must not contain abrasive matter, otherwise the turnstile surface will be damaged.
- Clean along the lines on the surface.
- Use cloth to dry the surface after using detergent and clean water.

Detergent Requirements

- Choose a stainless steel cleaner according to the actual situation. The ones with over 30% active ingredients are recommended.
- Do not use acidic substances, especially sulfuric acid, sulfurous acid, and those that contain chlorine.
- If there is adhesive failure, use organic solutions that have no oxidative capacity. Alcohol, dimethyl benzene, and acetone are normally used.
- For stainless steel with a processed surface (mirror finish or titanium coating), make sure that you use a neutral detergent containing no abrasive matter.

Appendix 3 Security Recommendation

Account Management

1. Use complex passwords

Please refer to the following suggestions to set passwords:

- The length should not be less than 8 characters;
- Include at least two types of characters: upper and lower case letters, numbers and symbols;
- Do not contain the account name or the account name in reverse order;
- Do not use continuous characters, such as 123, abc, etc.;
- Do not use repeating characters, such as 111, aaa, etc.

2. Change passwords periodically

It is recommended to periodically change the device password to reduce the risk of being guessed or cracked.

3. Allocate accounts and permissions appropriately

Appropriately add users based on service and management requirements and assign minimum permission sets to users.

4. Enable account lockout function

The account lockout function is enabled by default. You are advised to keep it enabled to protect account security. After multiple failed password attempts, the corresponding account and source IP address will be locked.

5. Set and update password reset information in a timely manner

The device supports password reset function. To reduce the risk of this function being used by threat actors, if there is any change in the information, please modify it in time. When setting security questions, it is recommended not to use easily guessed answers.

Service Configuration

1. Enable HTTPS

It is recommended that you enable HTTPS to access web services through secure channels.

2. Encrypted transmission of audio and video

If your audio and video data contents are very important or sensitive, it is recommended to use encrypted transmission function in order to reduce the risk of your audio and video data being eavesdropped during transmission.

3. Turn off non-essential services and use safe mode

If not needed, it is recommended to turn off some services such as SSH, SNMP, SMTP, UPnP, AP hotspot etc., to reduce the attack surfaces.

If necessary, it is highly recommended to choose safe modes, including but not limited to the following services:

- SNMP: Choose SNMP v3, and set up strong encryption and authentication passwords.
- SMTP: Choose TLS to access mailbox server.
- FTP: Choose SFTP, and set up complex passwords.
- AP hotspot: Choose WPA2-PSK encryption mode, and set up complex passwords.

4. **Change HTTP and other default service ports**

It is recommended that you change the default port of HTTP and other services to any port between 1024 and 65535 to reduce the risk of being guessed by threat actors.

Network Configuration

1. **Enable Allow list**

It is recommended that you turn on the allow list function, and only allow IP in the allow list to access the device. Therefore, please be sure to add your computer IP address and supporting device IP address to the allow list.

2. **MAC address binding**

It is recommended that you bind the IP address of the gateway to the MAC address on the device to reduce the risk of ARP spoofing.

3. **Build a secure network environment**

In order to better ensure the security of devices and reduce potential cyber risks, the following are recommended:

- Disable the port mapping function of the router to avoid direct access to the intranet devices from external network;
- According to the actual network needs, partition the network: if there is no communication demand between the two subnets, it is recommended to use VLAN, gateway and other methods to partition the network to achieve network isolation;
- Establish 802.1x access authentication system to reduce the risk of illegal terminal access to the private network.

Security Auditing

1. **Check online users**

It is recommended to check online users regularly to identify illegal users.

2. **Check device log**

By viewing logs, you can learn about the IP addresses that attempt to log in to the device and key operations of the logged users.

3. **Configure network log**

Due to the limited storage capacity of devices, the stored log is limited. If you need to save the log for a long time, it is recommended to enable the network log function to ensure that the critical logs are synchronized to the network log server for tracing.

Software Security

1. **Update firmware in time**

According to the industry standard operating specifications, the firmware of devices needs to be updated to the latest version in time in order to ensure that the device has the latest functions and security. If the device is connected to the public network, it is recommended to enable the online upgrade automatic detection function, so as to obtain the firmware update information released by the manufacturer in a timely manner.

2. **Update client software in time**

It is recommended to download and use the latest client software.

Physical Protection

It is recommended that you carry out physical protection for devices (especially storage devices), such as placing the device in a dedicated machine room and cabinet, and having access control and key management in place to prevent unauthorized personnel from damaging hardware and other peripheral equipment (e.g. USB flash disk, serial port).